

HOW TO ADJUST A FOUR PANEL ESSENCE DOOR

Materials Required

#3 Phillips head
screw driver

#2 Phillips head
screw driver

Flat head screw
driver

Putty knife

Adjusting your Essence Series® four panel sliding glass door helps it operate smoothly. Follow these instructions to adjust the locks and wheels on your door.

1. Remove the 4 adjustment plugs located at the bottom of the panels.



2. Using a putty knife, raise the weight of the panel off the rollers. This allows the adjustment screw to be turned without damaging the screw.
 - It is important to have the weight off the rollers when adjusting.



3. Use the #3 Phillips head screw driver to turn the adjustment screw.
 - Turn the screw clockwise to raise the panel
 - Turn the screw counterclockwise to lower the panel

4. Adjust the panels to the desired reveal and handle alignment.

5. On the active panel, locate the strike pin.



6. Compress the strike pin and activate the locking hardware.

Safety Precautions

This activity is appropriate for individuals with an understanding of how to use simple hand tools. Remember to wear eye protection and to make sure that pets and small children are not present when performing these activities.

For questions, please contact us:

1.800.MILGARD

milgard.com

7. The locking hardware on the vent panel can be adjusted with a flat head screwdriver.



- Unlock the hardware before testing the door operation.
8. If needed, make adjustments on the passive panel strike:
- Use a #2 Phillips head screw driver to loosen the 3 plate screws.
 - Move the plate up or down as needed to align with the locking mechanism.
9. Slide the panels to together and test lock adjustments.