

Product Care Instructions

HOW TO ADJUST SLIDING GLASS DOOR LOCK AND HANDLE

Materials Required

Putty knife

Phillips screwdriver

Safety Glasses

Gloves

- We're going to show you how to adjust the lock and handle on your sliding glass door.
- 1. Photo shows the handle and the locking snib. The snib releases and unlocks the door.



2. Now check the strike plate. If the door is not working properly and misaligns, it will move up and down.



Safety Precautions

This activity is appropriate for individuals with an understanding of how to use simple hand tools. Remember to wear eye protection and to make sure that pets and small children are not present when performing these activities.

For questions, please contact us:

1.800.MILGARD milgard.com 3. The strike plate cap bears the Milgard logo. The engagement tongue on the snib must run into the Milgard logo to properly latch. If it is above or below the logo, the lock will not engage.



4. Using a putty knife, remove the strike plate to expose the adjustment screw.







Product Care Instructions

5. Use a Phillips screwdriver to back out the screw and the other two, which are located above and below.



6. The strike plate can be moved up and down accordingly. Once in proper alignment, reinsert the screws and the strike plate.



7. Double check your lock once this is in place.