

HOW TO REPLACE A VINYL AWNING WINDOW OPERATOR

Materials Required

Phillips screw driver

Flat head screw driver or putty knife

New vinyl awning window operator

These instructions walk you through how to replace the operator on a Milgard® vinyl awning window.

1. Open the awning window about three-quarters of the way.



2. Locate the two arm clips at the base of the sash.



3. Remove clips from the track guides by pulling towards the operator.

4. Fully extend the operator arms.

NOTE: If you have nesting hardware, please remove the handle and cover.



Safety Precautions

This activity is appropriate for individuals with an understanding of how to use simple hand tools. Remember to wear eye protection and to make sure that pets and small children are not present when performing these activities.

For questions, please contact us:


1.800.MILGARD

milgard.com

5. Using a Phillips screwdriver, remove the operator screws.




6. Remove the operator, it will pull out towards you.

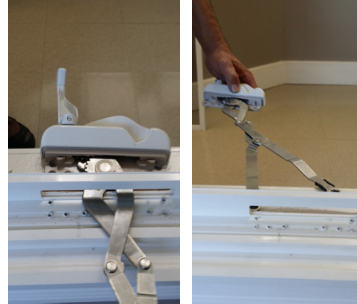

7. Before installing the new operator, make sure both arms are fully extended.



8. Install the new operator into the window frame.

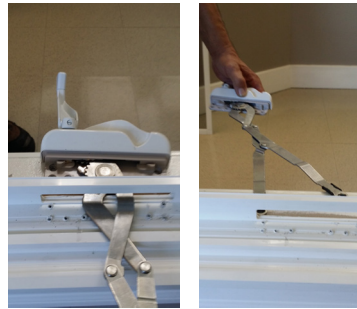

9. Fasten the new operator using the Phillips screwdriver and screws. NOTE: Be careful not to over torque the screws stripping out the vinyl.



10. Finish by connecting the two operator arm clips to the track guides at the base of the vent sash.