



DIY SELF-SERVICE GUIDE

HOW TO ADJUST A WINDOW VENT



Materials Required:

Small Flat Head Screwdriver



Difficulty:

Low



Time Requirement:

10 minutes

INSTRUCTIONS:

1. Use this guide to adjust a window vent if the reveal is off.

REVEAL IS UNEVEN/OFF



2. Open the window past the anti-lift blocks.




ANTI-LIFT BLOCKS

3. Lift straight up and lift the bottom out to remove the panel.

4. Pop out individual wheels with a small flathead screwdriver.




WHEELS

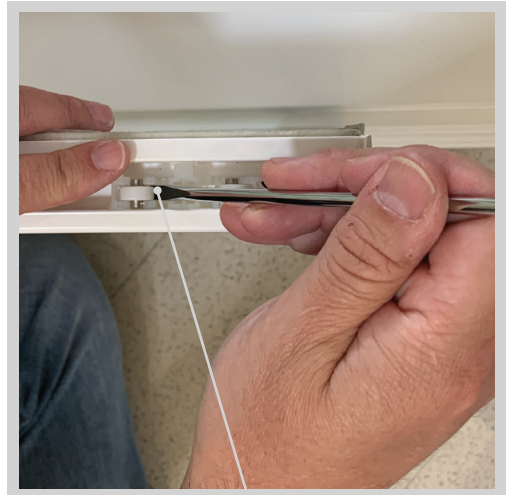


POP OUT WITH SCREWDRIVER

5. To raise the window, move and reinstall the wheels to the inside track.

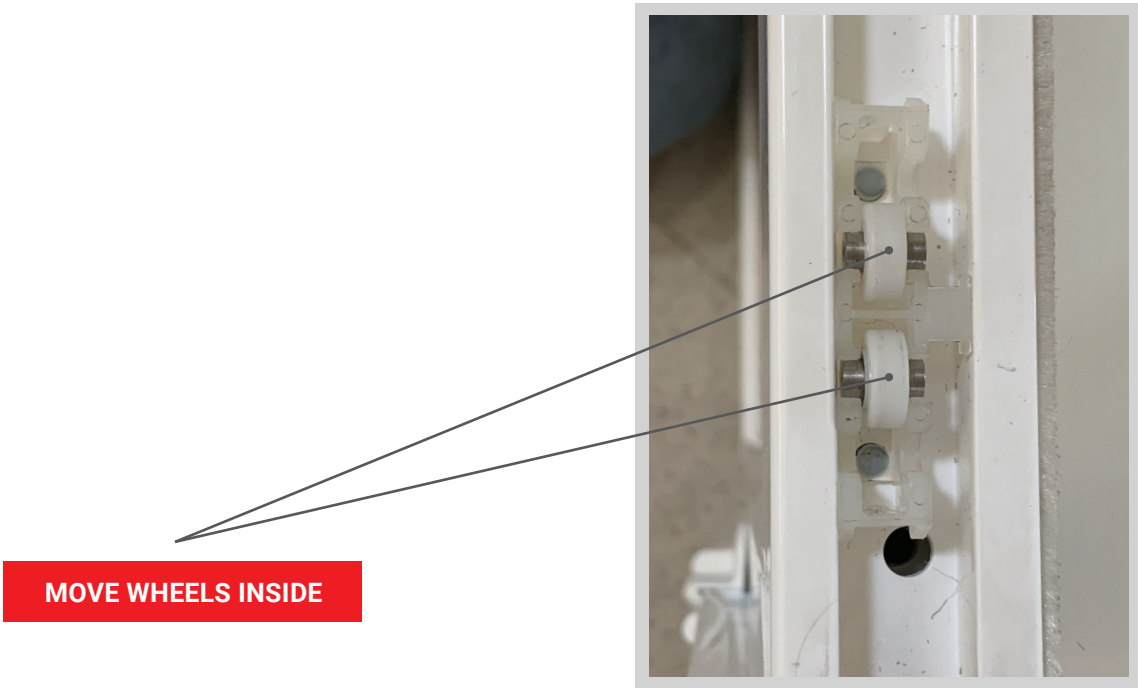

6. To lower the window, move and reinstall the wheels to the outside track.

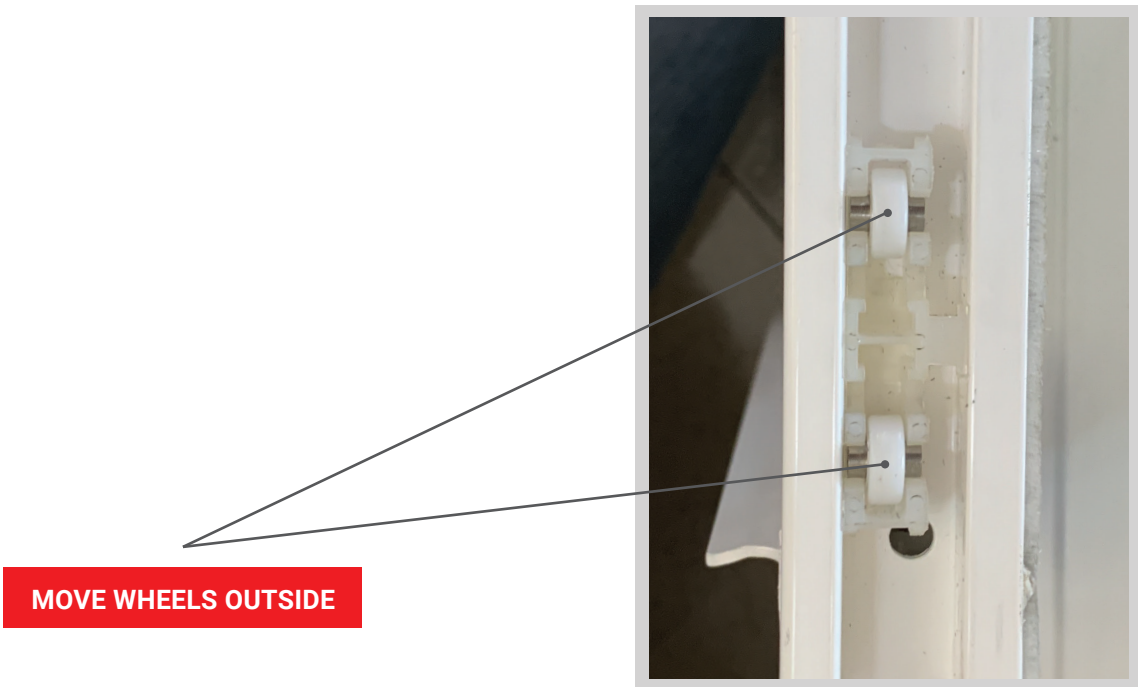

7. To reinstall the panel, go past the anti-lift blocks and lift straight up, insert the bottom and slide the panel.



LIFT AND INSERT BOTTOM



STRAIGHT/EVEN REVEAL