



DIY SELF-SERVICE GUIDE

HOW TO REPLACE AND INSTALL A STRIKE ON A VINYL SLIDING WINDOW



Materials Required:

Putty Knife, Mallet



Difficulty:

Easy



Time Requirement:

5 minutes

INSTRUCTIONS:

Includes Style Line™ Series, Trinsic™ Series, Tuscany® Series and Montecito® Series vinyl sliding windows.

To remove the strike:

1. Open the window all the way. Lift up the sash and swing the bottom out.



LIFT AND SWING OUT

2. Use a putty knife to pry out the strike (starting on either end).
3. The strike is removed.



STRIKE


PRY OUT STRIKE

To reinstall the strike:

1. Place the bottom of the lip in first, push towards the top and press the strike into place.
2. You may find it helpful to use a rubber mallet to knock it into place.
3. Reinstall the window sash, top first and then the bottom.



START WITH BOTTOM

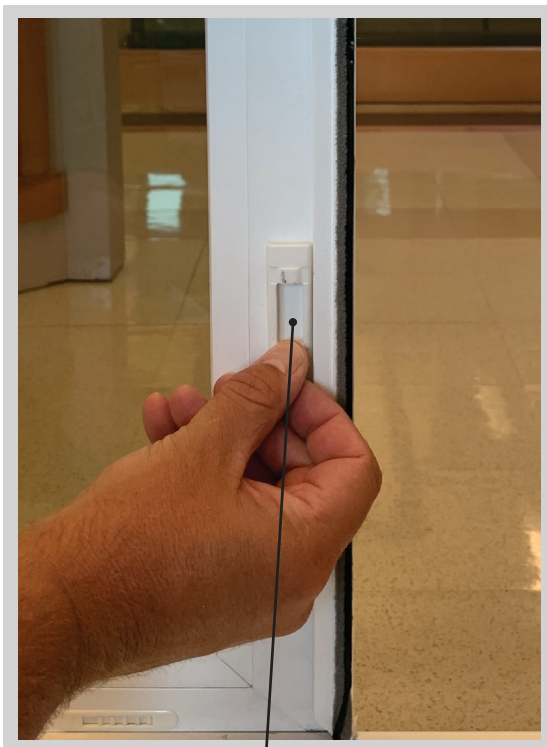

PRESS INTO PLACE