

MILGARD®

C650 Fastener Schedule

Appendix:

Page 1: Vertical Sliders

Page 2: Horizontal Sliders

Page 3: Slider Picture Windows

Page 4: Mull Combinations with Sliders

Page 5: Casements

Page 6: Awnings

Page 7: Fixed Casements & Awnings



Page 8: Sliding Glass Doors

Page 9: Outswing Doors

Page 10: Inswing Doors

C650 Vertical Sliders



MILGARD.

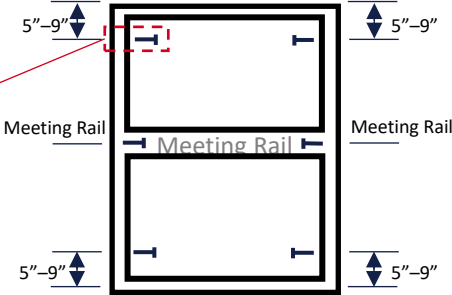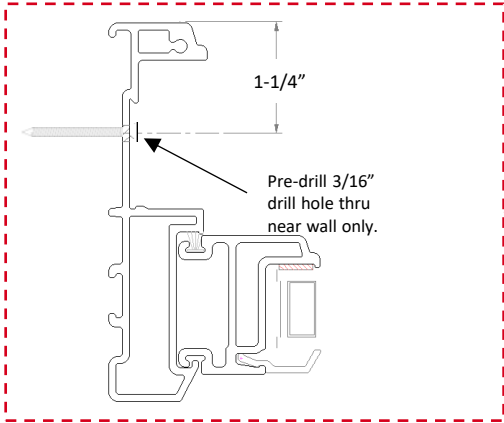


Drive QTY 6X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall.

C650 Horizontal Sliders

MILGARD.

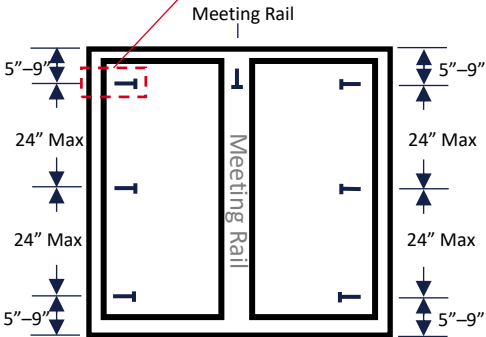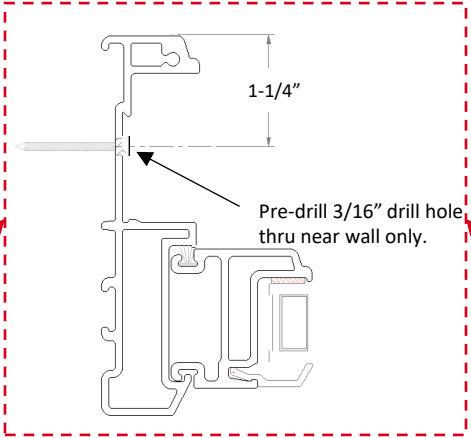


Drive minimum QTY 7X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall. Add additional fasteners as necessary to meet the spacing criteria.

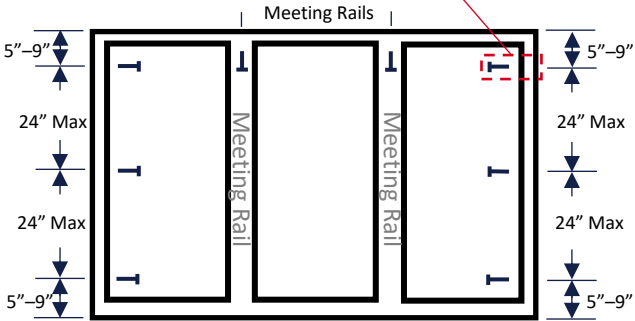

Drive minimum QTY 8X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall. Add additional fasteners as necessary to meet the spacing criteria.


C650 Slider Picture Windows

MILGARD.

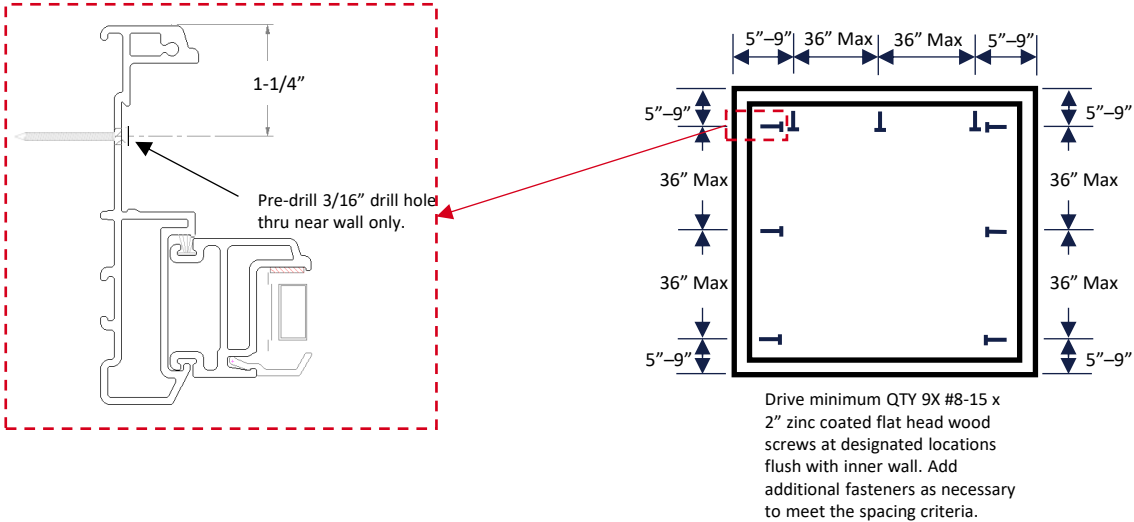


C650 Mull Combination with Sliders

MILGARD.

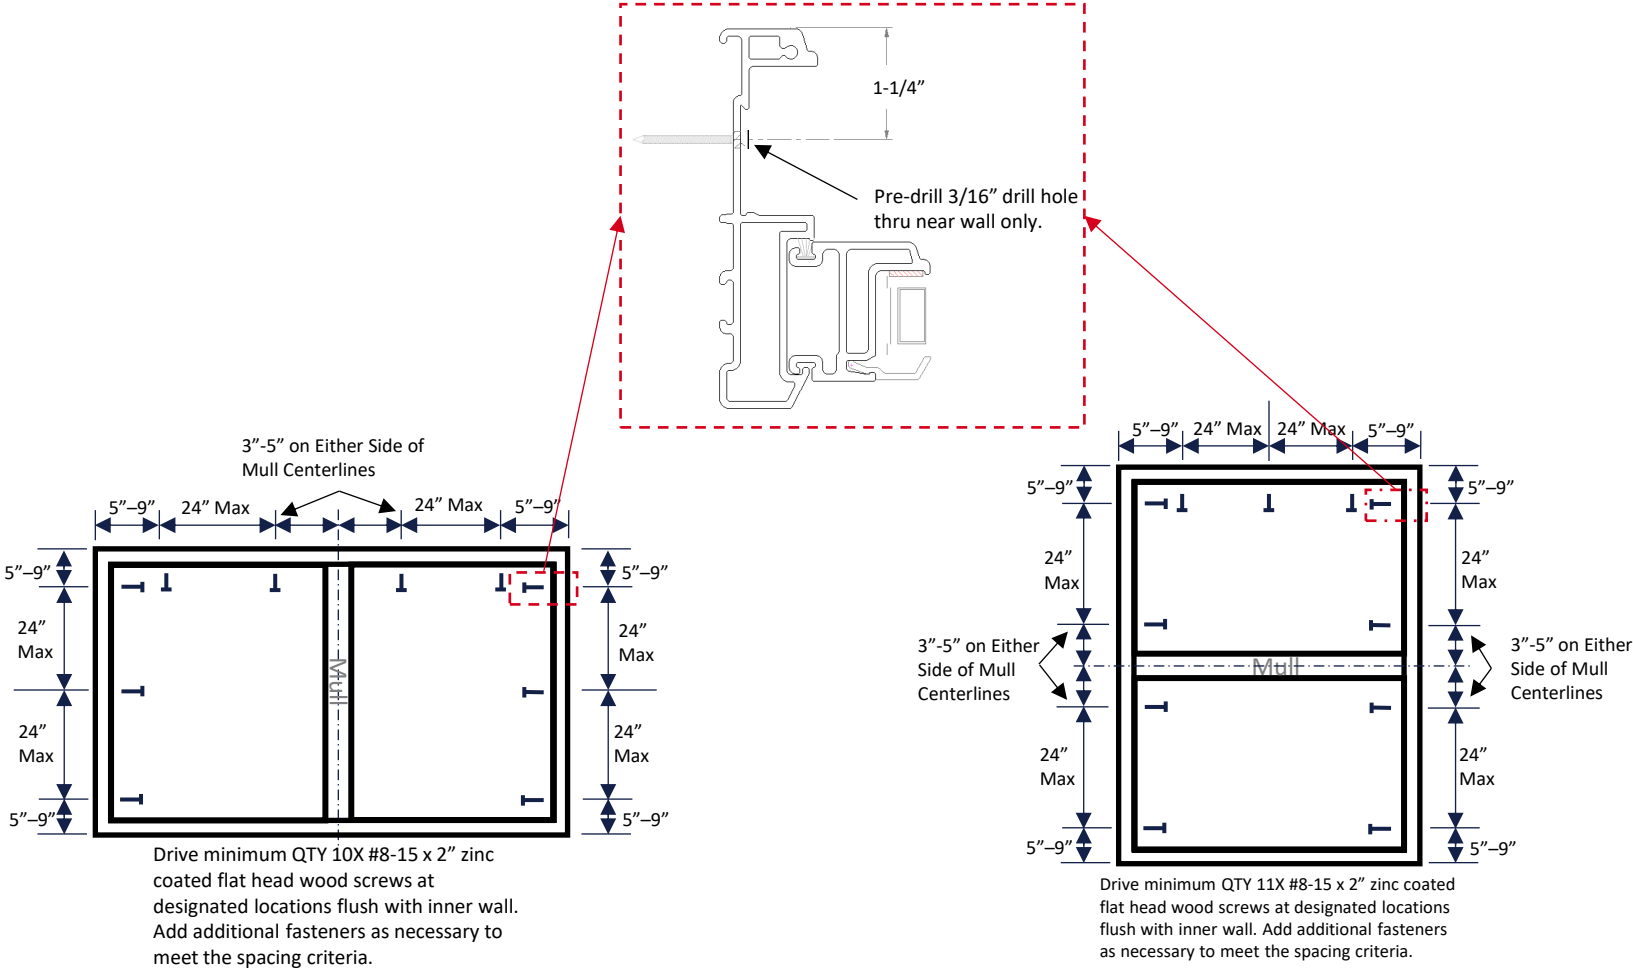



C650 Casements

MILGARD.

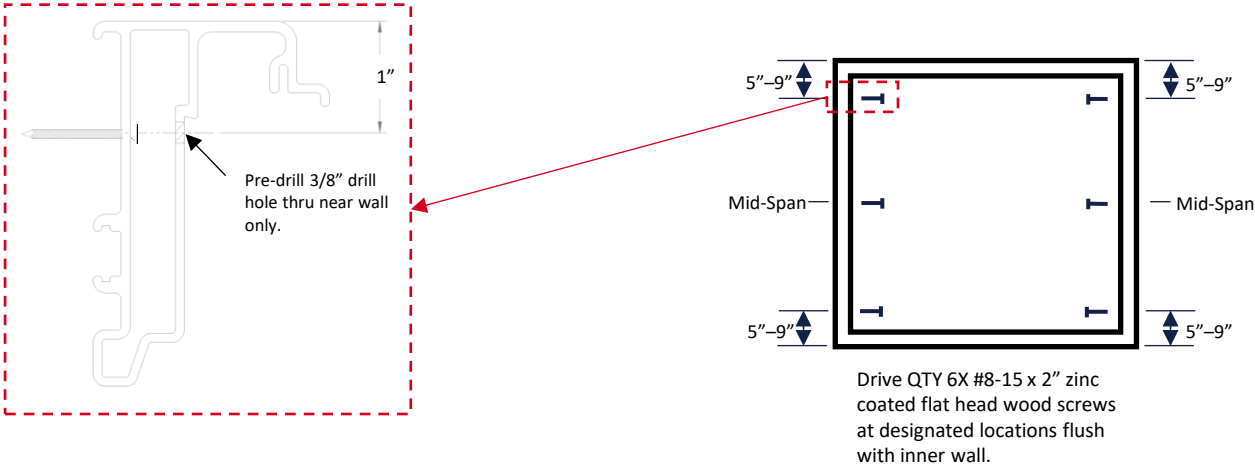

C650 Awnings



MILGARD.

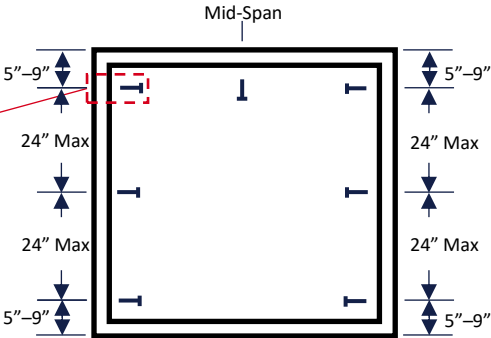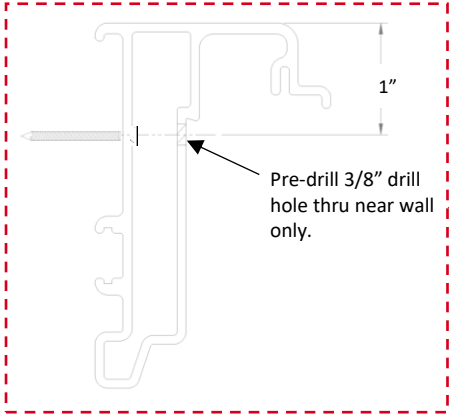

Drive minimum QTY 7X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall. Add additional fasteners as necessary to meet the spacing criteria.

C650 Fixed Casements & Awnings



MILGARD.

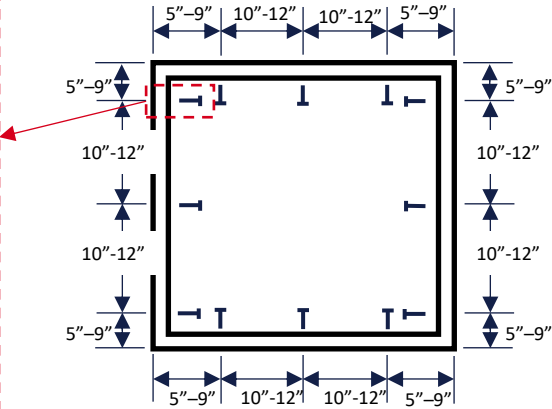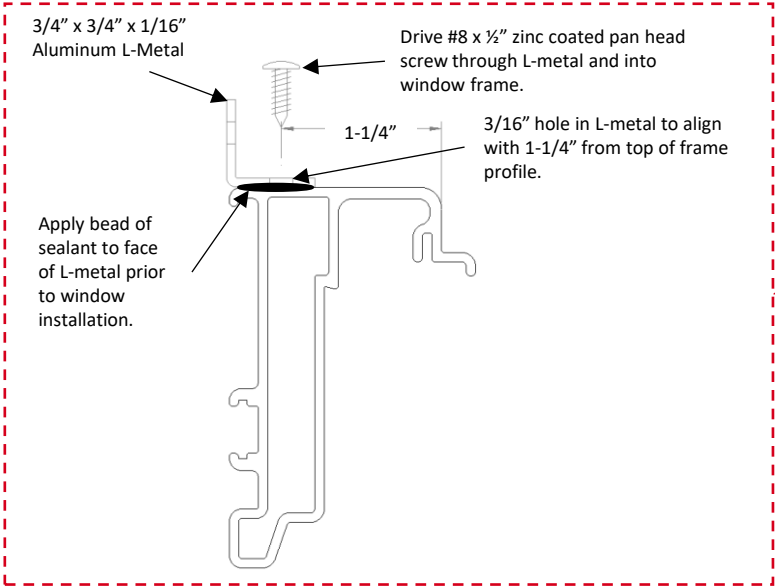

Drive minimum QTY 12X #8-15 x 2" zinc coated flat head wood screws through L bracket and into rough opening. Add additional fasteners as necessary to meet the spacing criteria.

C650 Sliding Glass Doors – Jambs & Head


MILGARD.

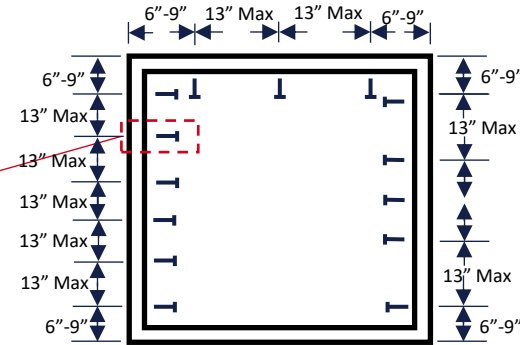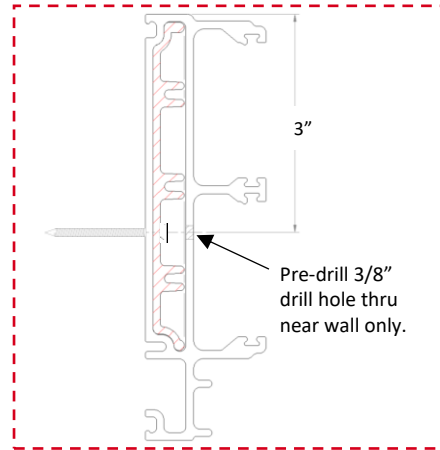

Drive minimum QTY 14X #8-15
x 2" zinc coated flat head
wood screws at designated
locations flush with inner wall.
Add additional fasteners as
necessary to meet the spacing
criteria.

C650 Outswing Doors – Jambs & Head



MILGARD.

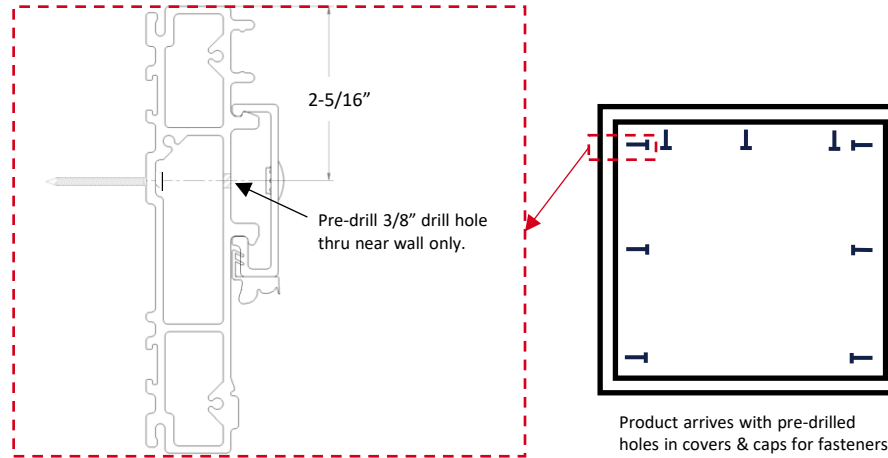

Product arrives with pre-drilled holes in covers & caps for fasteners; Drive QTY 9X #8-15 x 2" zinc coated flat head wood screws at pre-drilled locations flush with inner wall. Then cover clearance hole with cap.

C650 Inswing Doors – Jambs & Head

MILGARD.

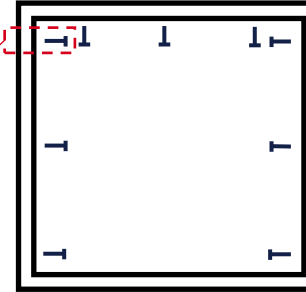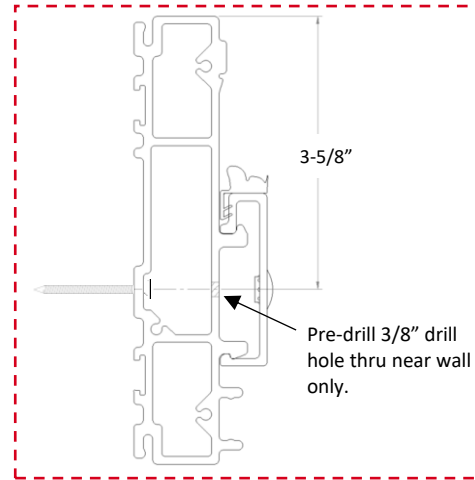

Product arrives with pre-drilled holes in covers & caps for fasteners; Drive QTY 9X #8-15 x 2" zinc coated flat head wood screws at pre-drilled locations flush with inner wall. Then cover clearance hole with cap.