

MILGARD®

V300/V250 Fastener Schedule

Appendix:

Page 1: Vertical Sliders

Page 2: Horizontal Sliders

Page 3: Slider Picture Windows

Page 4: IMR Combinations with Sliders

Page 5: Casements

Page 6: Awnings



Page 7: Fixed Casements & Awnings

Page 8: IMR Combinations with Casements & Awnings

Page 9: Sliding Glass Doors

V300/V250 Vertical Sliders



MILGARD.

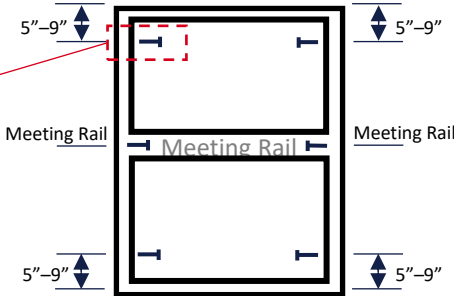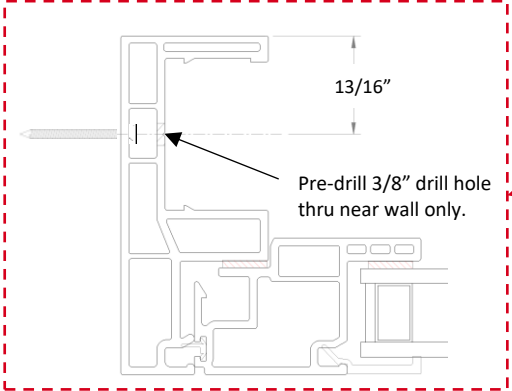


Drive QTY 6X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall.

V300/V250 Horizontal Sliders

MILGARD.

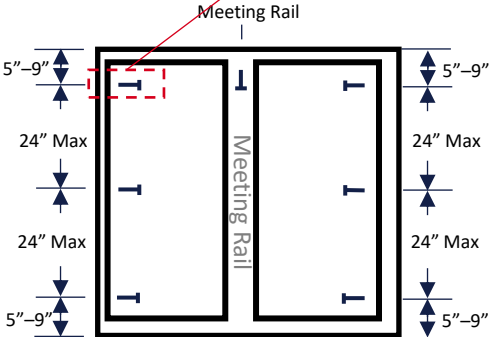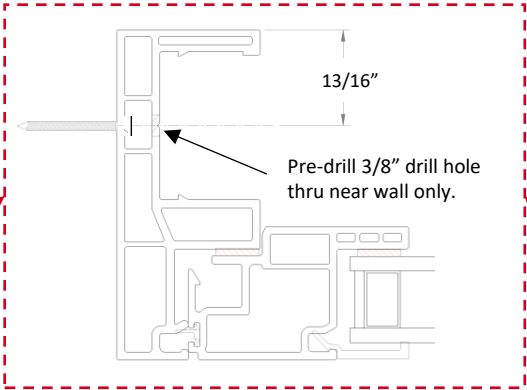



Drive minimum QTY 7X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall. Add additional fasteners as necessary to meet the spacing criteria.

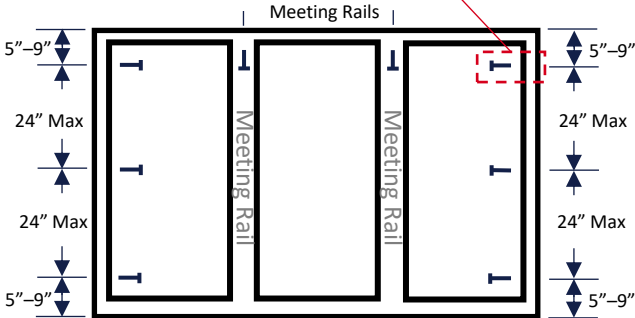

Drive minimum QTY 8X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall. Add additional fasteners as necessary to meet the spacing criteria.

V300/V250 Slider Picture Windows


MILGARD.

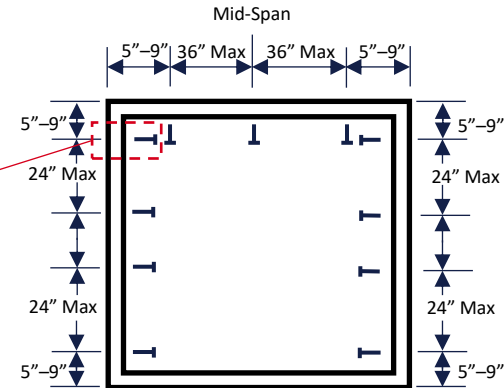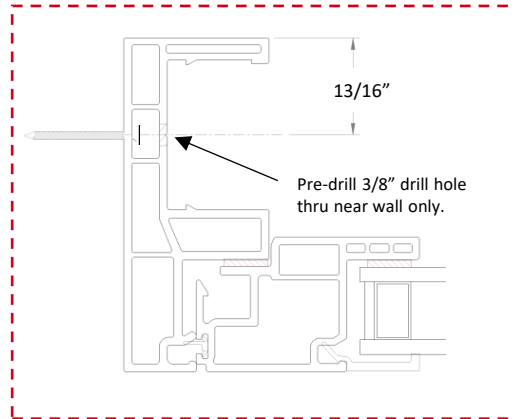

Drive minimum QTY 11X #8-15
x 2" zinc coated flat head
wood screws at designated
locations flush with inner wall.
Add additional fasteners as
necessary to meet the spacing
criteria.


V300/V250 IMR Combinations with Sliders

MILGARD

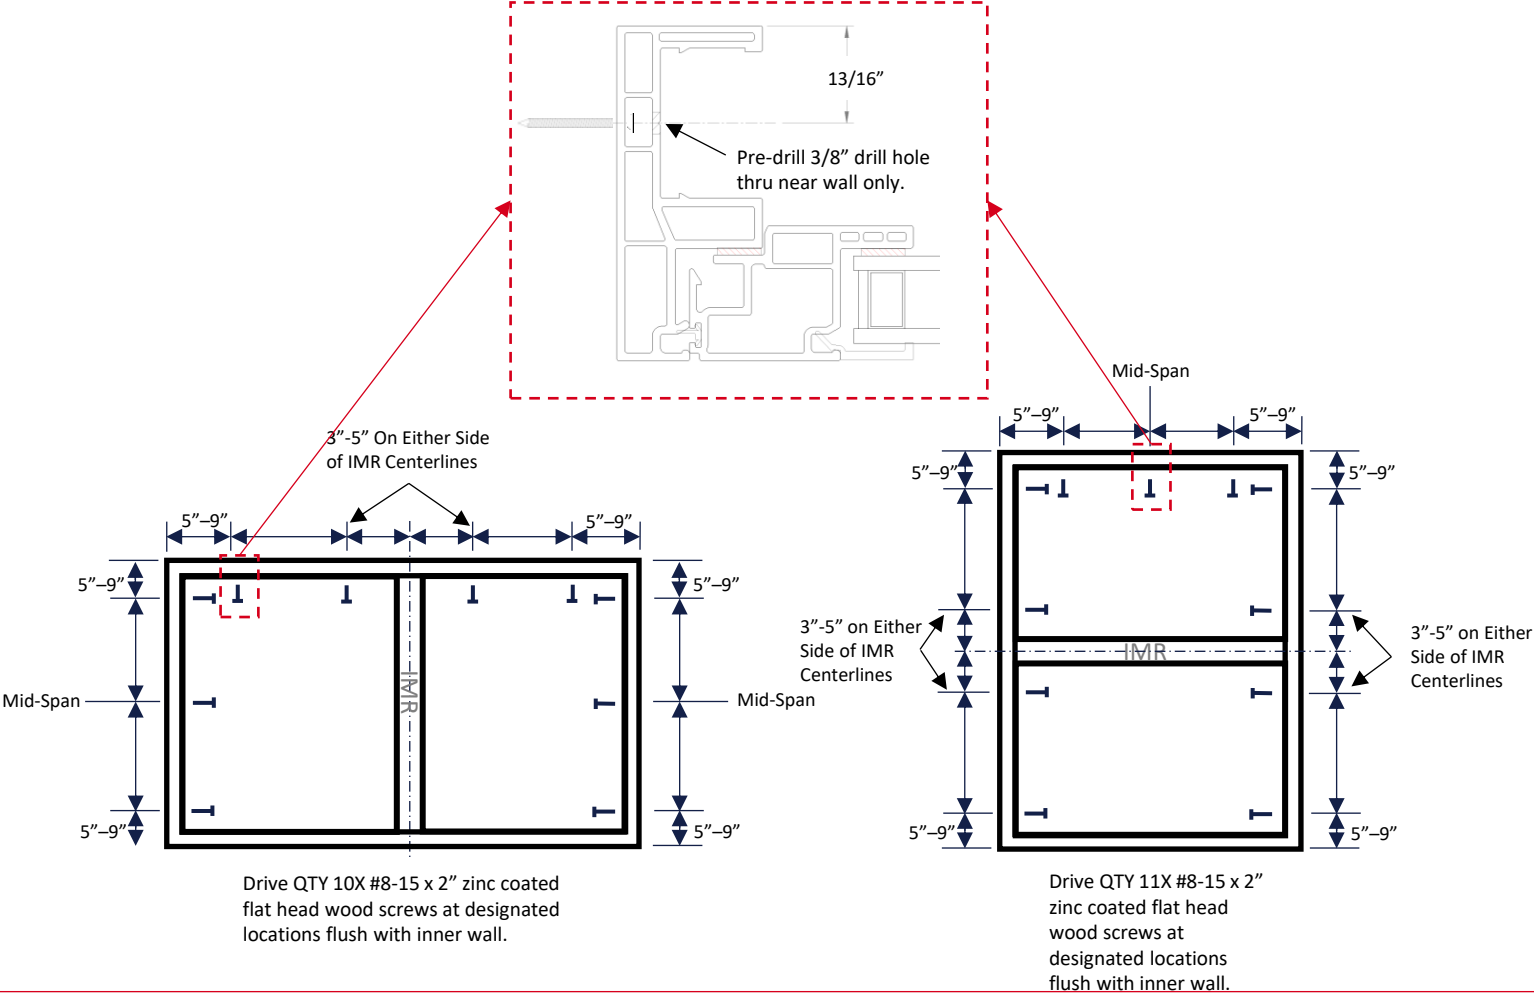



V300/V250 Casements

MILGARD.

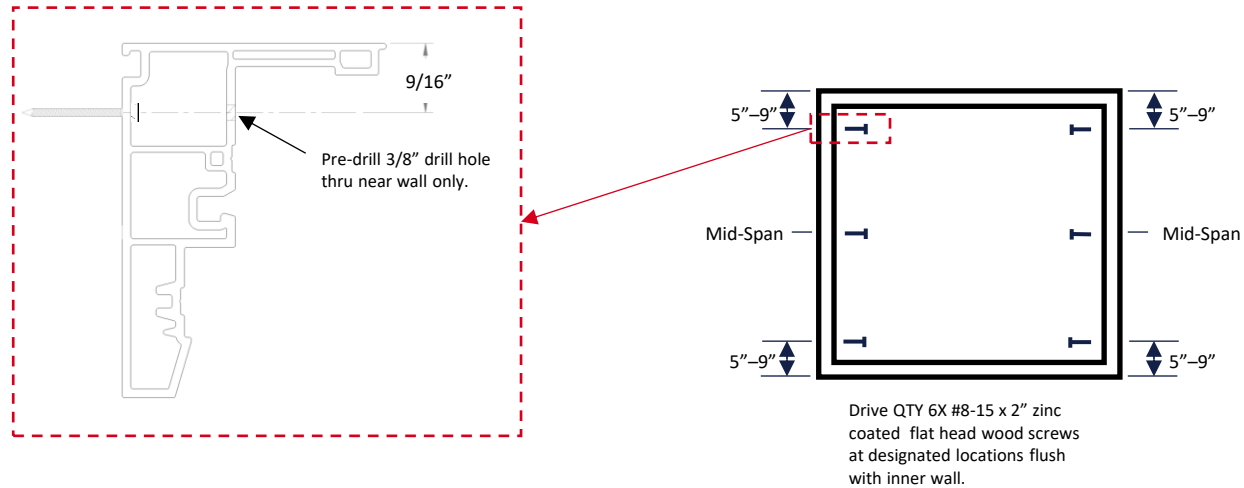

V300/V250 Awnings



MILGARD.

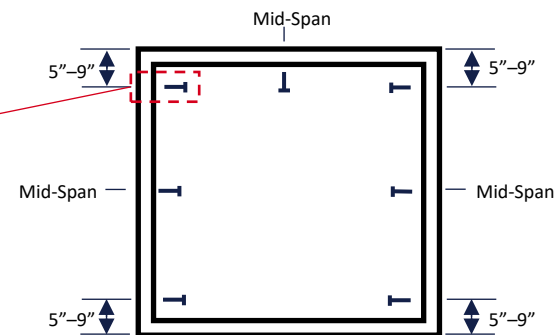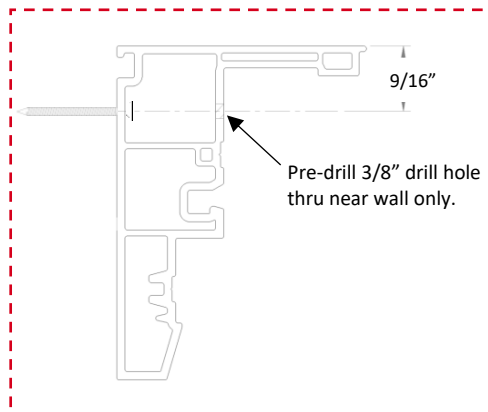

Drive QTY 7X #8-15 x 2\" zinc coated flat head wood screws at designated locations flush with inner wall.

V300/V250 Fixed Casement & Awnings




MILGARD.

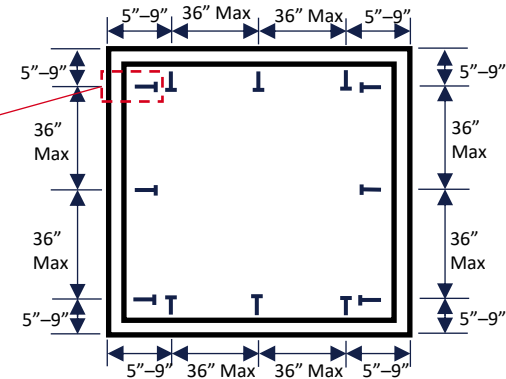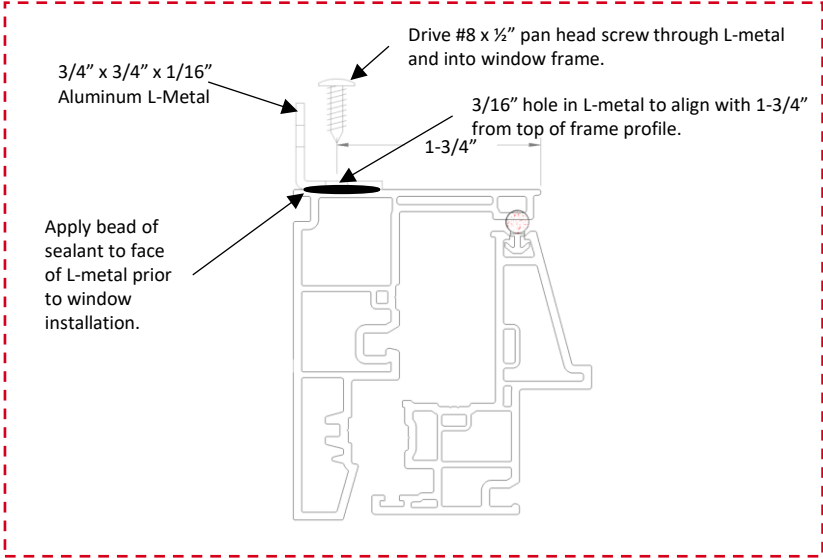

Drive minimum QTY 12X #8-15 x 2" zinc coated flat head wood screws through L bracket and into rough opening. Add additional fasteners as necessary to meet the spacing criteria.



V300/V250 IMR Combinations with Casements & Awnings

MILGARD.

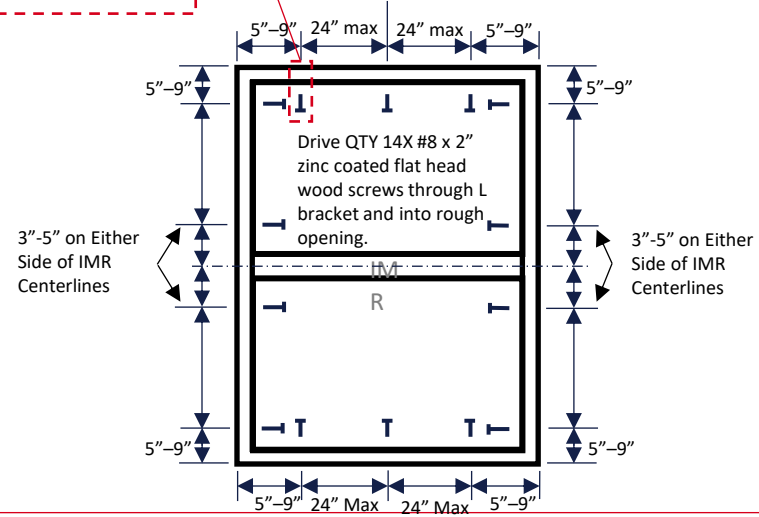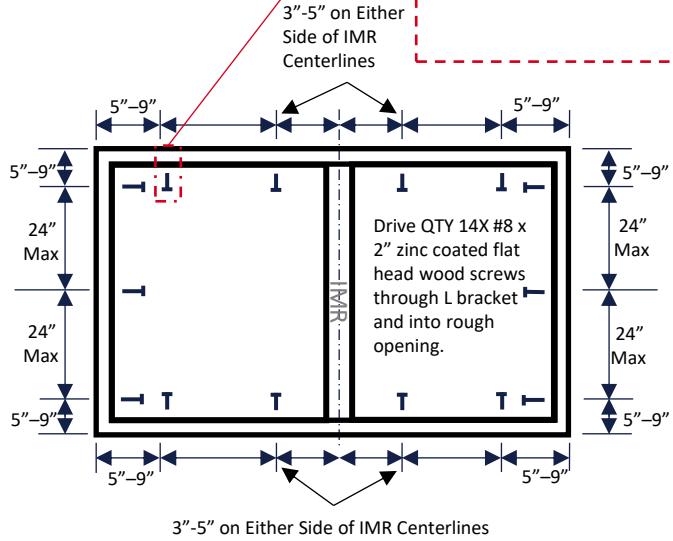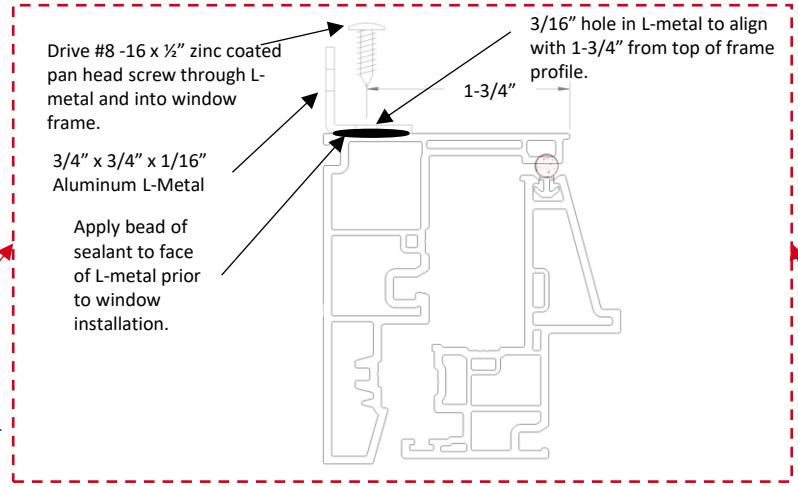

V300 Sliding Glass Doors – Jambs & Head

MILGARD.

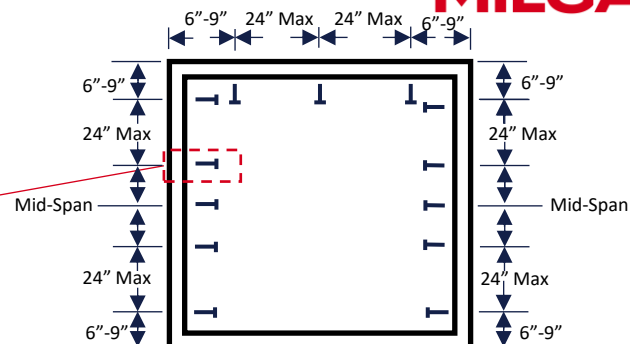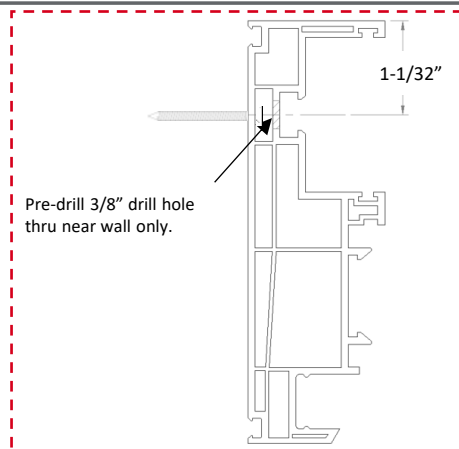


Drive minimum QTY 13X #8-15 x 2" zinc coated flat head wood screws at designated locations flush with inner wall. Add additional fasteners as necessary to meet the spacing criteria.

V300 Sliding Glass Doors – Sill


Drive #8-15 x 1/2" zinc coated pan head screw through L-metal and into window frame.

3/16" hole in L-metal to align with 1-1/8" from top of frame profile.

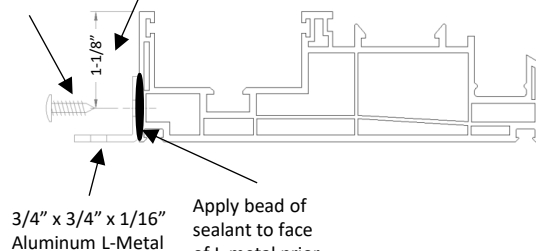

3/4" x 3/4" x 1/16" Aluminum L-Metal

Apply bead of sealant to face of L-metal prior to window installation.

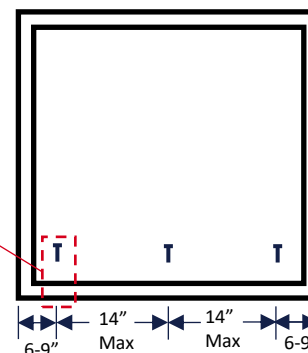

Drive minimum QTY 3X #8-15 x 2" zinc coated flat head wood screws through L bracket and into rough opening. Add additional fasteners as necessary to meet the spacing criteria.