

MILGARD®

VX350
Stacking
**Installation
Instructions**

MOVING GLASS WALLS

By MITER Brands™



Things to Know Before You Start

REMOVAL OF OLD FENESTRATION PRODUCTS

Ensure any old fenestration products are removed and properly disposed of. You may be able to recycle or donate removed glass and frames. For more information, check with your local recycling agency, the American Architectural Manufacturers Association (AAMA), the US Environmental Protection Agency at www.epa.gov/recycle, or the Building Materials Reuse Association website to locate a nearby company or organization that accepts used windows and doors. To donate removed products, contact local nonprofits in need of building supplies, such as Habitat for Humanity.

NOTE: Homes and condominiums built before 1978 may have lead-based paint which can pose serious health hazards during removal. Information and instruction regarding proper management of lead paint is available at www.epa.gov/lead.

INSTALLATION PREPARATION

Multi-slide doors are custom manufactured specific to each application. Prior to installation it is important that you carefully review and understand the installation instructions and any drawings supplied. MILGARD fenestration products should only be installed by experienced and qualified installation professionals. Failure to follow these instructions may result in poor performance including, but not limited to, operation, security, and weatherproofing failures and may void MILGARD warranties.

PRODUCT HANDLING AND STORAGE




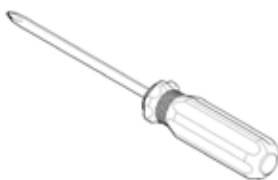
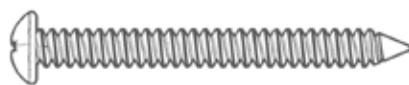



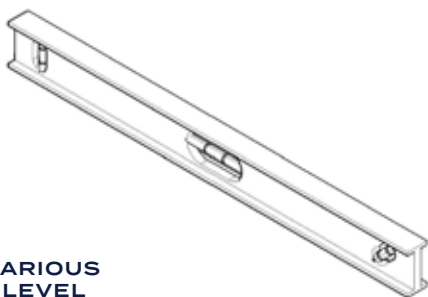




This is a finished product that must be protected before, during, and after installation to prevent damage to the glass, frame, finish, and hardware. Door panels should be stored in a dry location that is protected from the elements. Wet packaging can cause damage to product finishes. If the packaging becomes wet immediately replace it with dry packaging. Door panels should be stored and transported upside down and should not be dropped or dragged from the delivery truck to avoid damage to the bottom rails and rollers systems.

COMPONENTS

The components supplied will vary depending on the configuration you are installing. Before proceeding with the installation, inspect the components to become familiar with them and confirm that there is no damage that will affect the appearance or performance of the installed product. Damaged or missing parts should be reported to your supplier immediately.

Things to Know Before You Start

OTHER TOOLS AND PRODUCTS NECESSARY FOR INSTALLATION

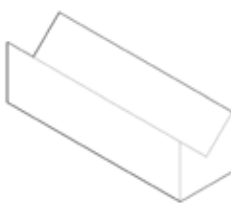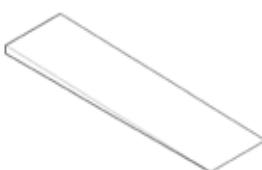		 <p>IMPACT DRIVER With #2 Phillips bit</p> <p>DRILL With 6" long 9/64" drill bit</p> <p>HAMMER DRILL With 1/4" bit (only required for masonry installation)</p>	
<p>FLASHING MEMBRANE</p>	<p>SEALANT Compatible with flashing membrane</p>		
			
<p>#2 PHILLIPS SCREWDRIVER</p>	<p>#10 X 2" PPH SCREWS For frame installation</p>		<p>#8 X 1" PPH SCREWS For frame installation</p>
			
<p>1 1/4" PAN HEAD SELF-TAPPING SCREWS For nail fins and fixed panel anchoring</p>	<p>PRY BAR</p>	<p>LEVELS OF VARIOUS SIZE/LASER LEVEL</p>	
			
<p>PUTTY KNIFE</p>	<p>DEAD BLOW RUBBER Mallet</p>	<p>PLASTIC BLOCK</p>	<p>SHIMS*</p>

*Except in circumstances where a particular shim type is specified by applicable building codes – either wedge shims or horseshoe shims may be used. Shimming must be even across the door unit. Each shim must be long enough to cover the full width of the door frame from front to back.


Things to Know Before You Start

COMPONENTS

Rough opening must be waterproofed in accordance with AAMA Installation Masters standards, flashing and sealant manufacturer instructions, and meet all local building codes.

FRAME COMPONENTS

Each door will have a head track assembly, threshold track assembly, lock jamb assembly, and fixed jamb assembly.

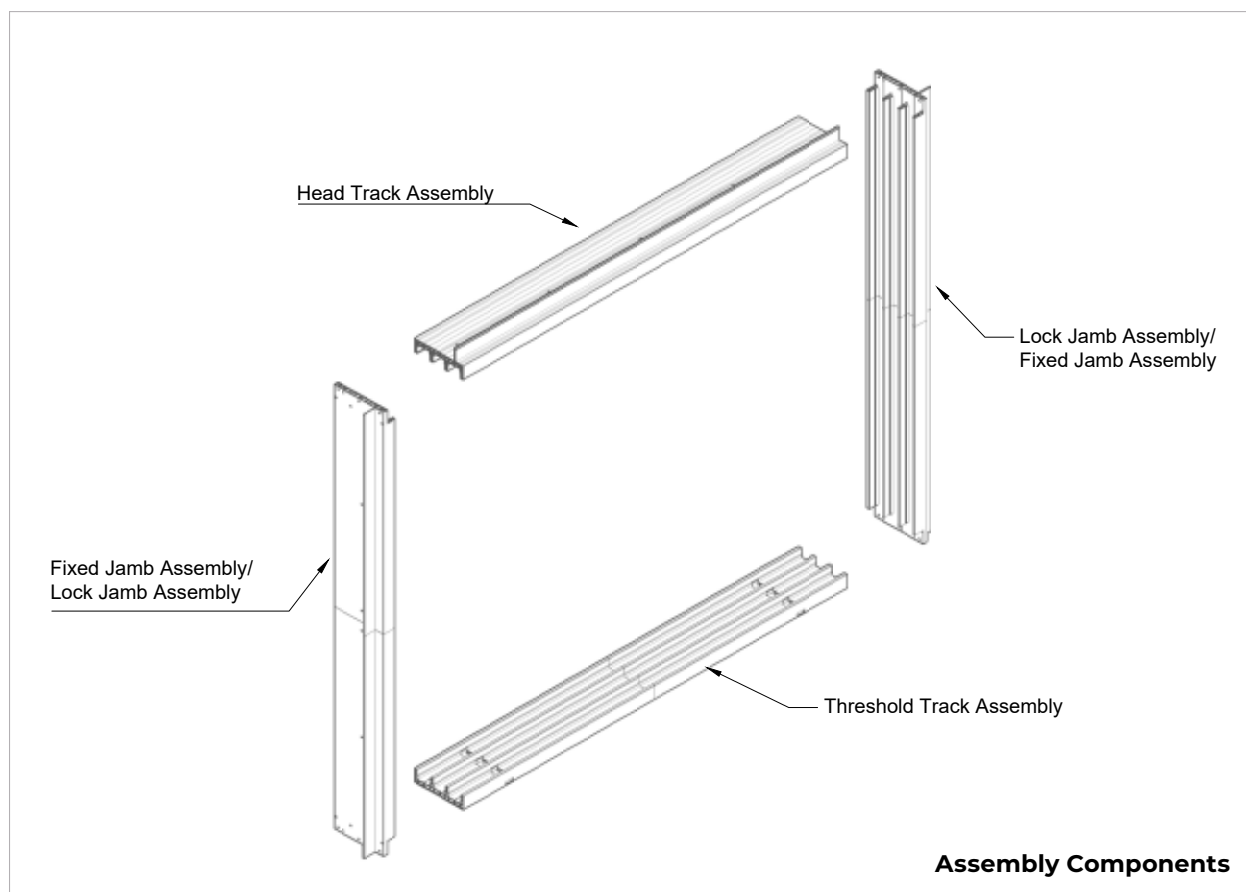


Step 1 - Frame Installation

- 1a. Inspect the rough opening carefully to ensure it has been prepared correctly to accept the configuration and size you are installing. See Fig. 1.1.
- 1b. Check the floor to see that it is flat and level. If the floor varies more than .0625" (1/16") per foot or a total of .25" (1/4") over the entire width of the opening, it must be corrected before proceeding with installation.

Fig. 1.1

Verify Rough Opening for Square, Plumb, and Level

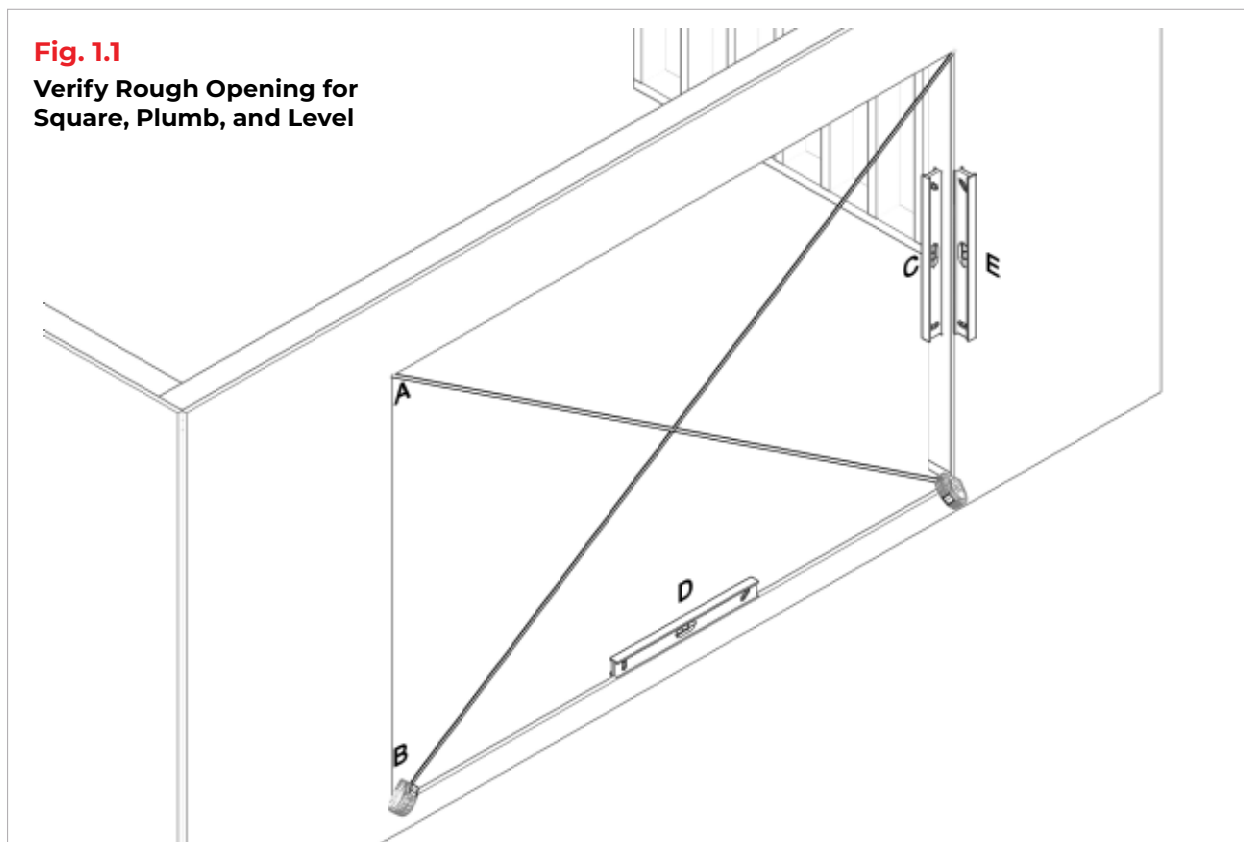

Step 2 - Frame Installation

2a. Flash sill followed by the jambs. See Figs. 2.1 and 2.2 for 2- and 3-panel doors. See Figs. 2.3 and 2.4 for 4-panel doors.

Fig. 2.1

**Apply Flashing to Opening at Sill
(2- or 3-Panel Frame)**

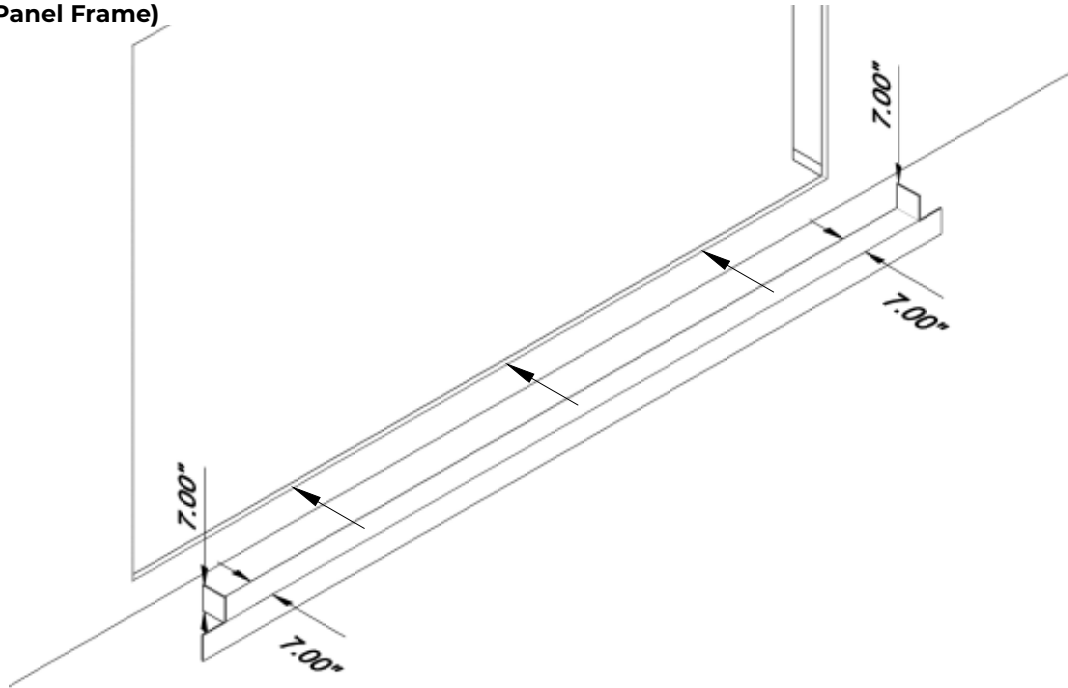


Fig. 2.2

**Apply Flashing to Opening at Jambs
(2- or 3-Panel Frame)**

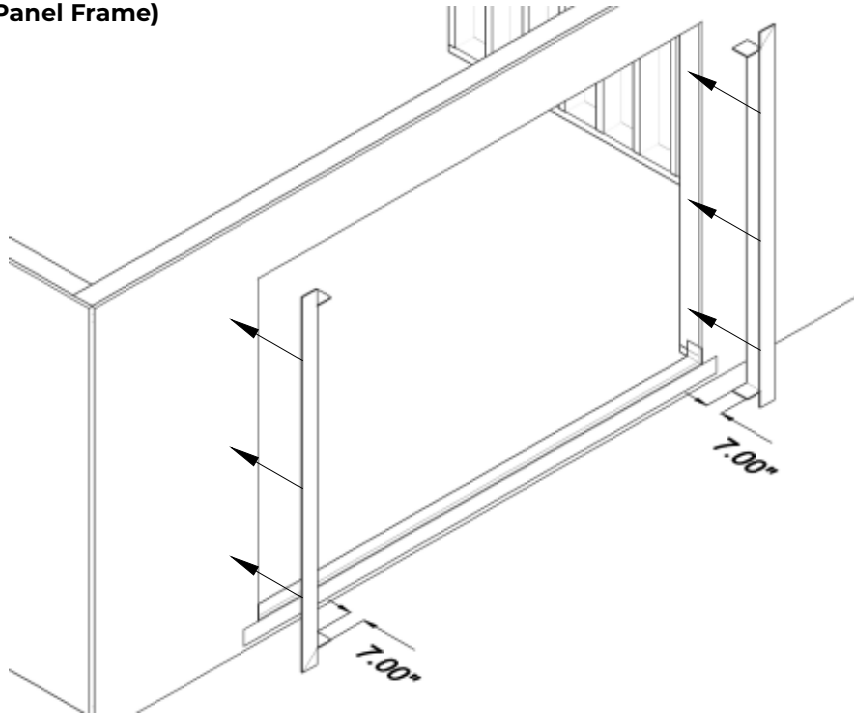


Fig. 2.3

**Apply Flashing to Opening at Jambs
(4-Panel Frame)**


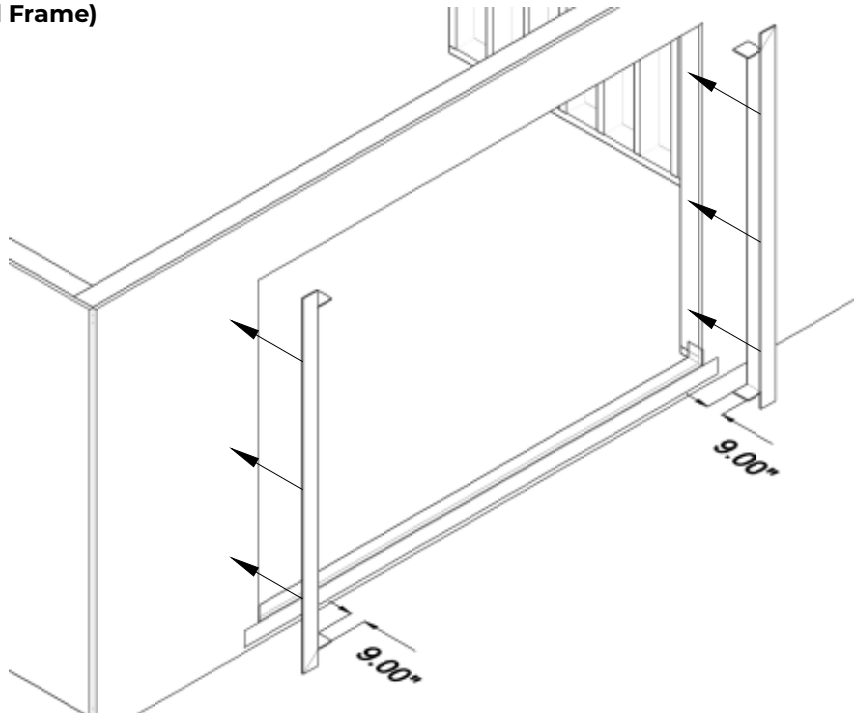


Fig. 2.4



**Apply Flashing to Opening at Jambs
(4-Panel Frame)**

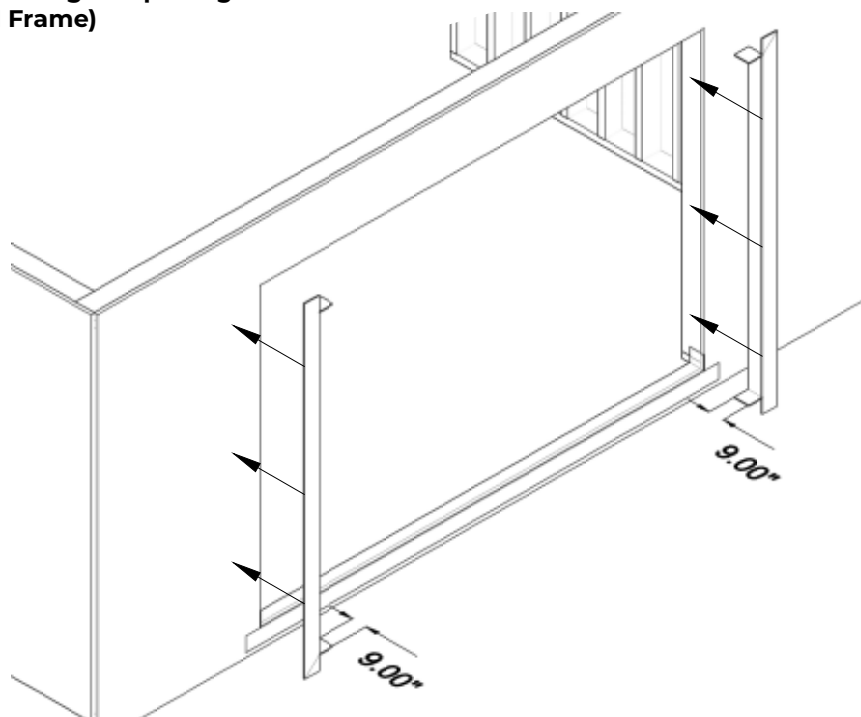

Step 3 - Frame Installation

3a. Seal corner joints and assemble frame using supplied #8 x 1" PPH screws. See Fig. 3.1.

3b. Seal corner joints and assemble frame using supplied #8 x 1" PPH screws. See Fig. 3.2.

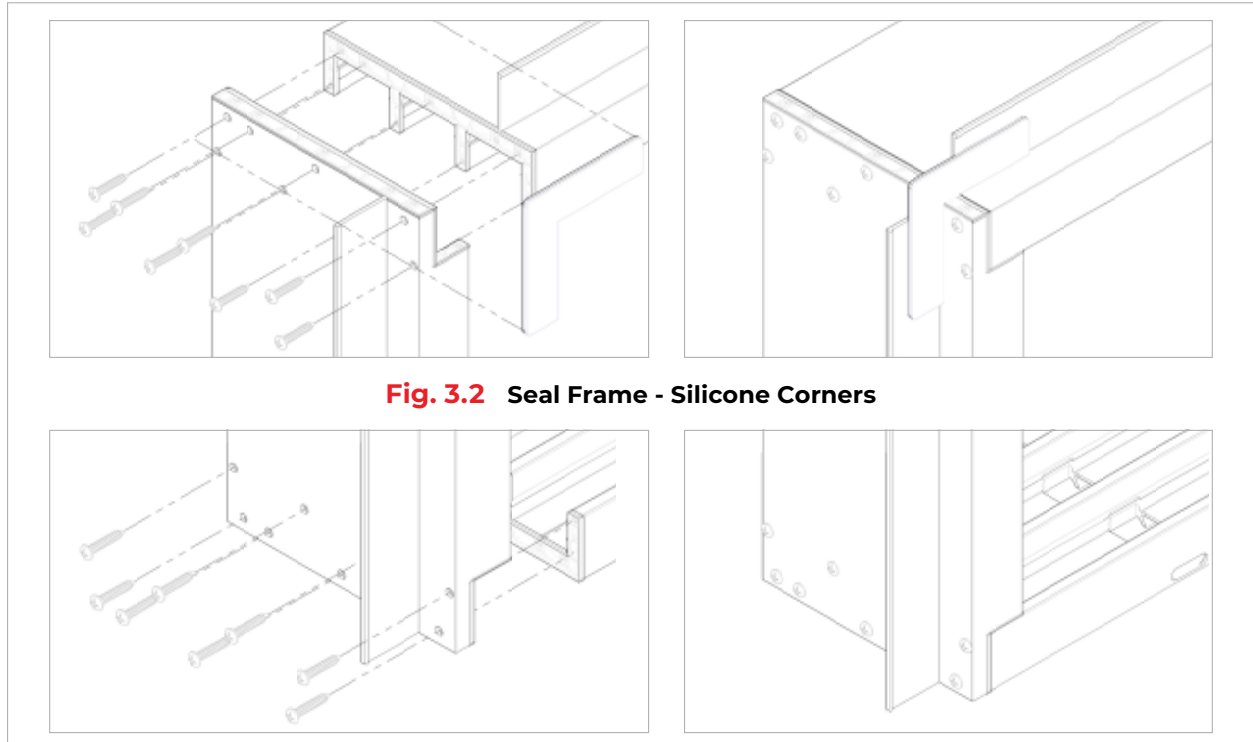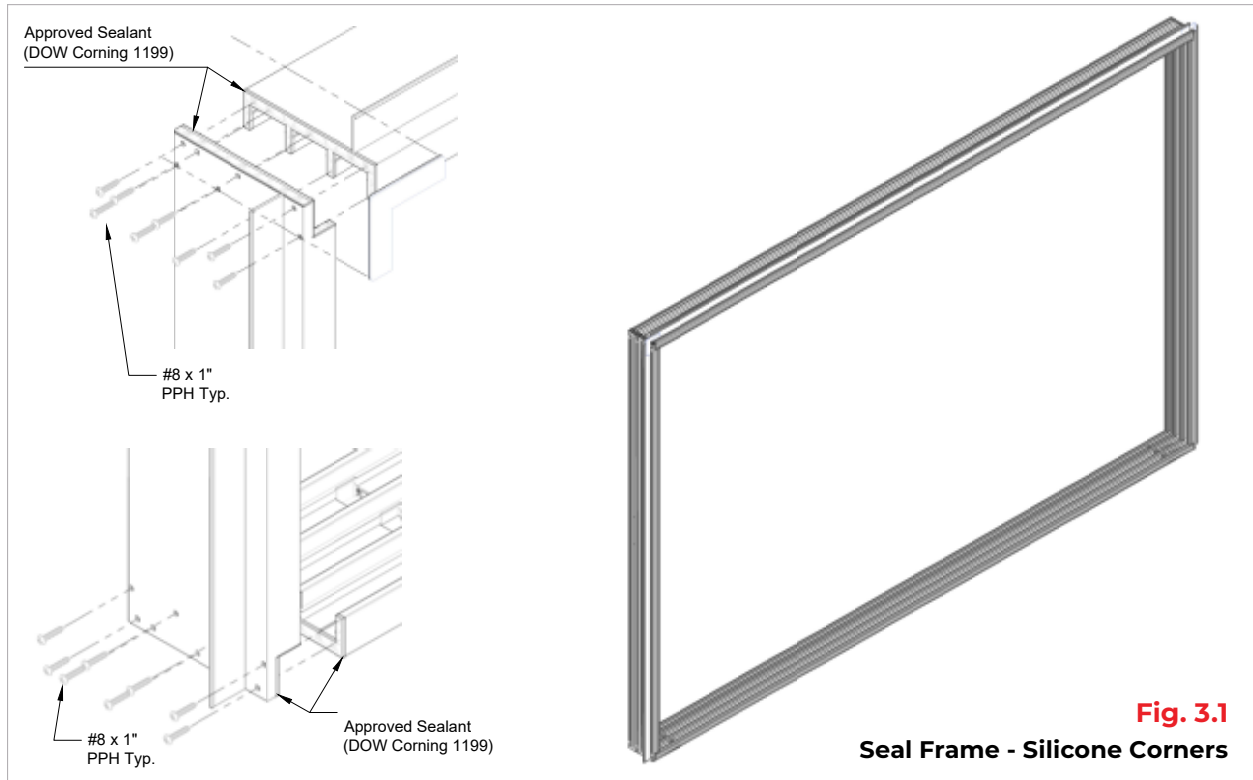

Step 4 - Frame Installation

- 4a. Apply a .50" (1/2") wide by .50" (1/2") high bead of sealant on the floor from jamb to jamb applying 6" up the jamb and from the inside corners across the end to the outside edge of where the threshold will be. Inspect the sealant carefully to ensure that a complete water barrier has been accomplished across the full width of the opening. Add lines of sealant from the inside bead straight out as shown in Figs. 4.1, 4.2, and 4.3.

Fig. 4.1

View of Sealant Application at Threshold

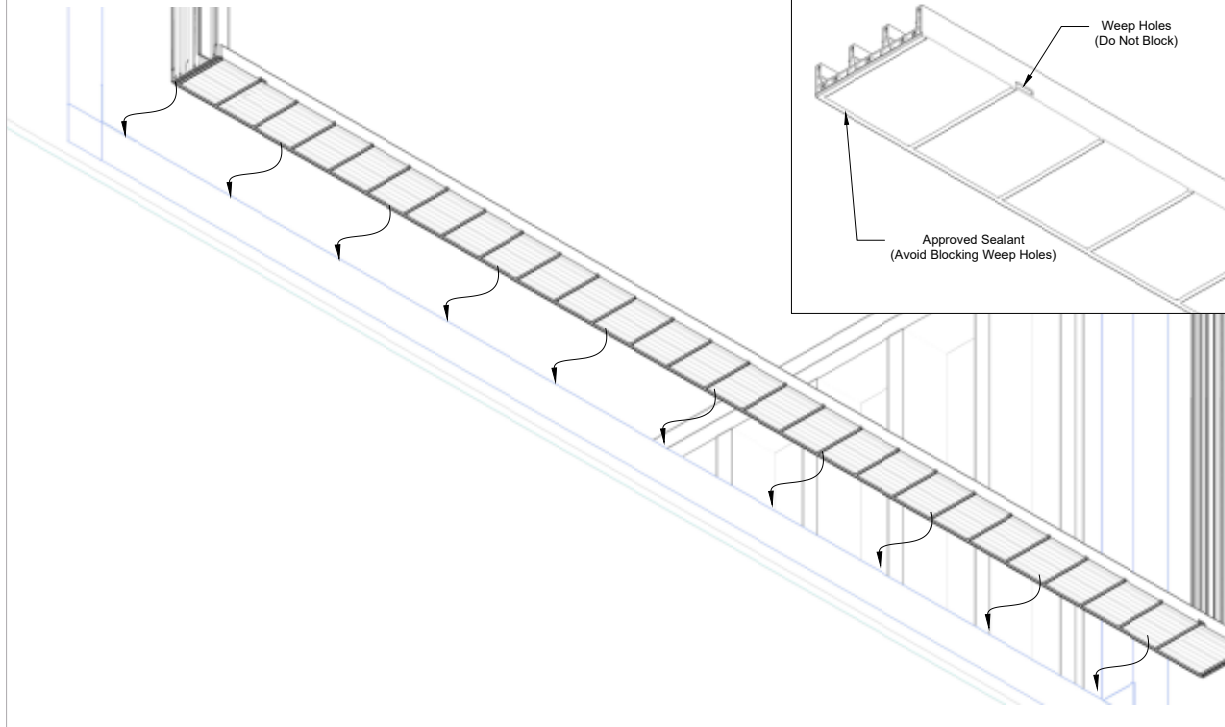


Fig. 4.2

View of Sealant Application at Rough Opening (RO)


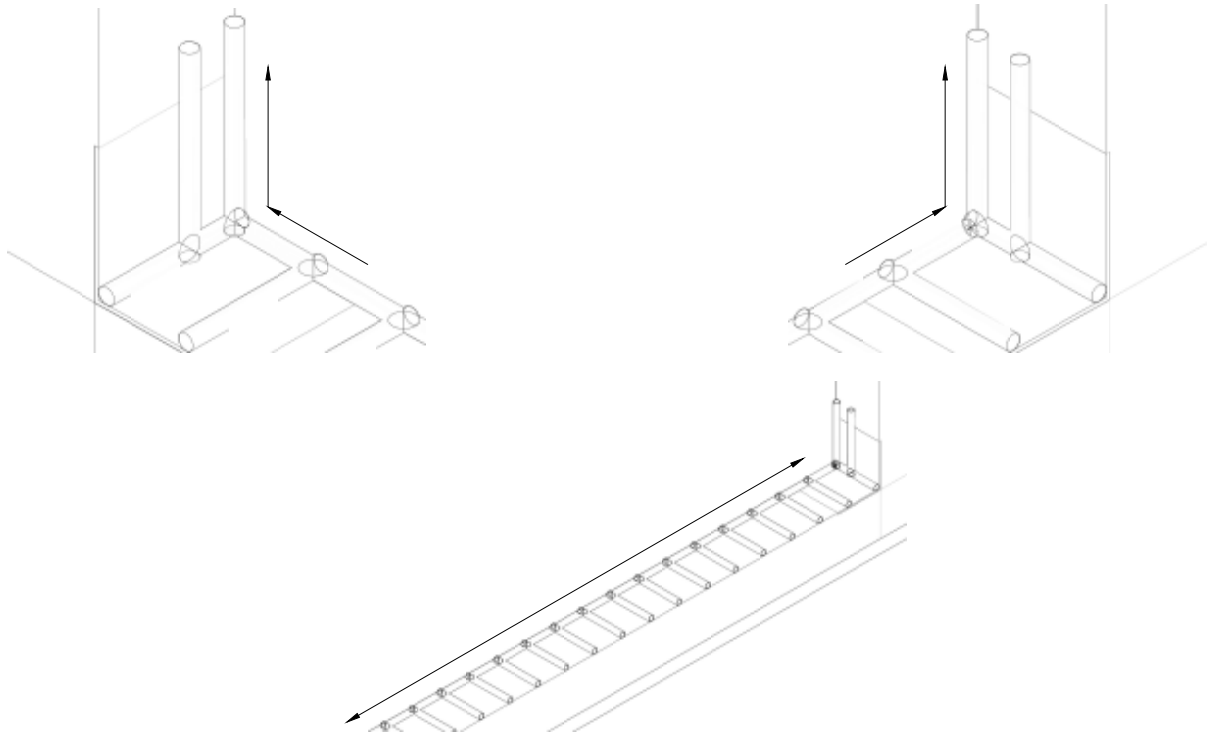


Fig. 4.3

View of Sealant Application at Perimeter of Rough Opening (RO)

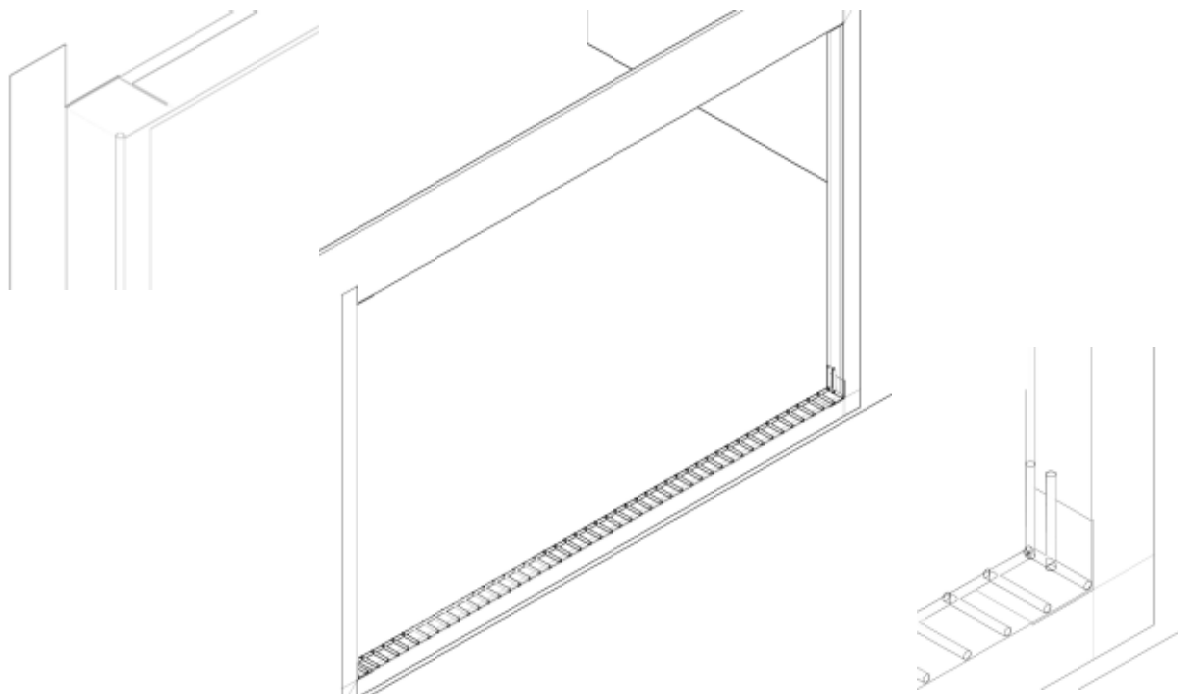


Step 5 - Frame Installation

5a. Tilt the door frame into the rough opening setting the sill first. See Fig. 5.1.

5b. Shim sill as needed to level. Shims should be no more than 6" apart.

Fig. 5.1

Install Assembled Frame

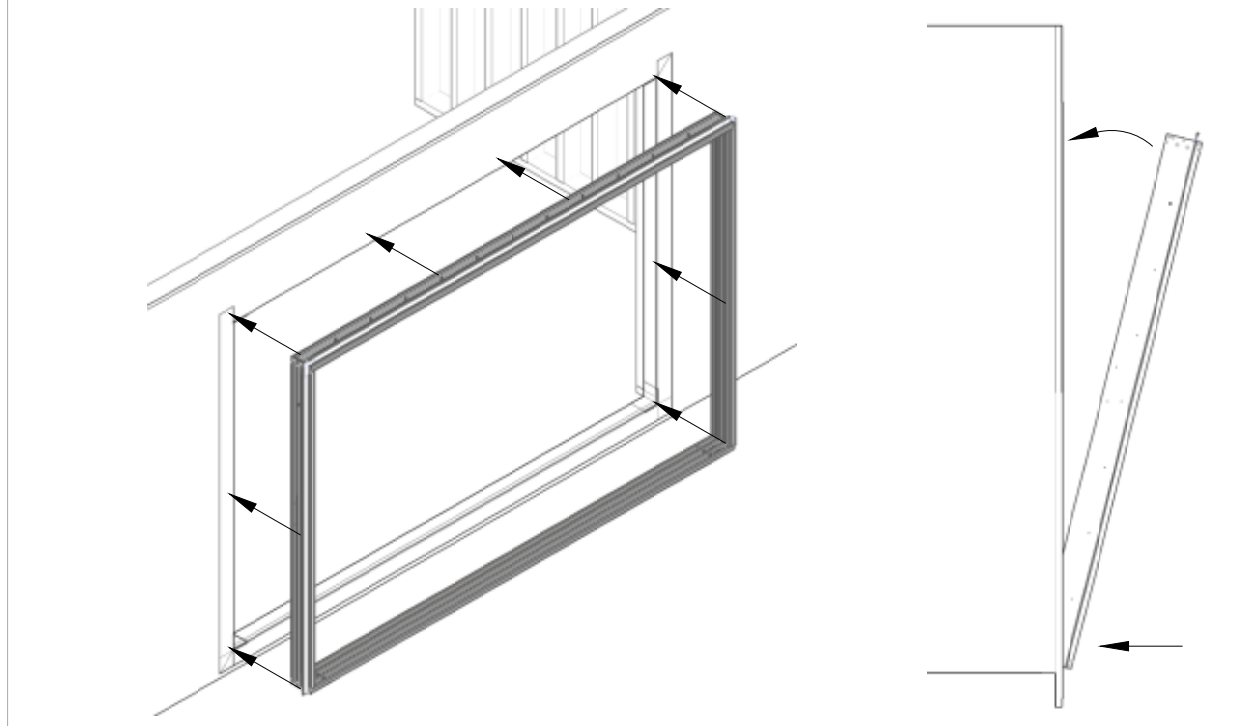

- 5c. Plumb and anchor jambs using #10 x 2" PPH screws located 6" from each corner and 12" on center. Shim at all anchor points. See Figs. 5.2 and 5.3.

NOTE: When anchoring through the jambs, be certain to offset the screw location so that it lines up with the indentation line in the jamb. This will eliminate any interference with the middle leg of the jamb cover when applying it later in the process.

Fig. 5.2

Fasteners at Jambs and Nail-Fin


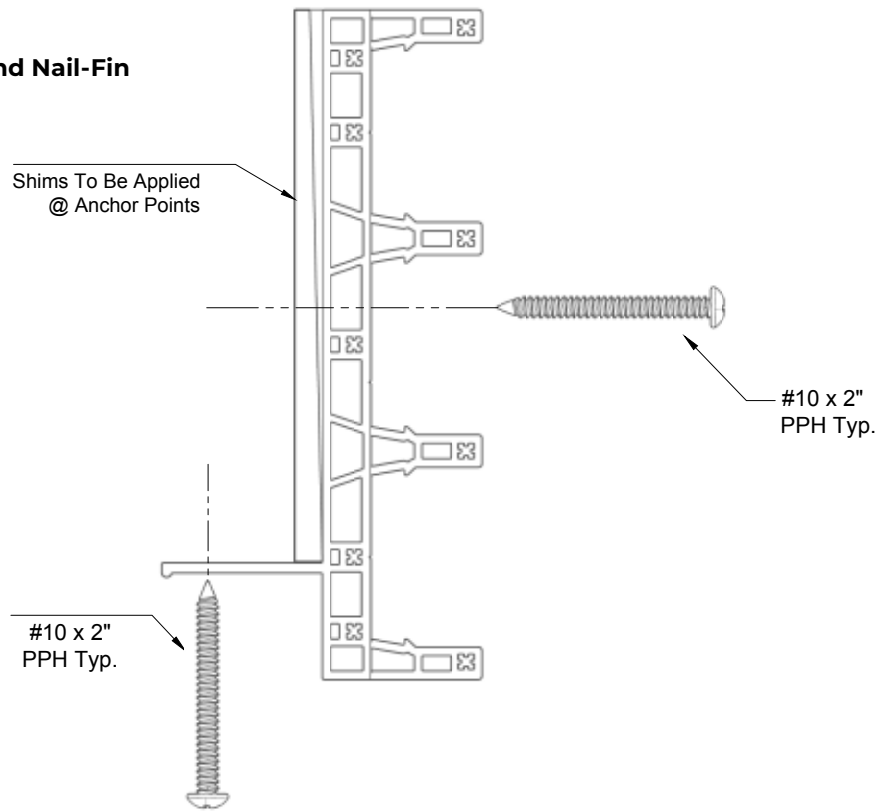


Fig. 5.3

Fasteners at Head and Nail-Fin

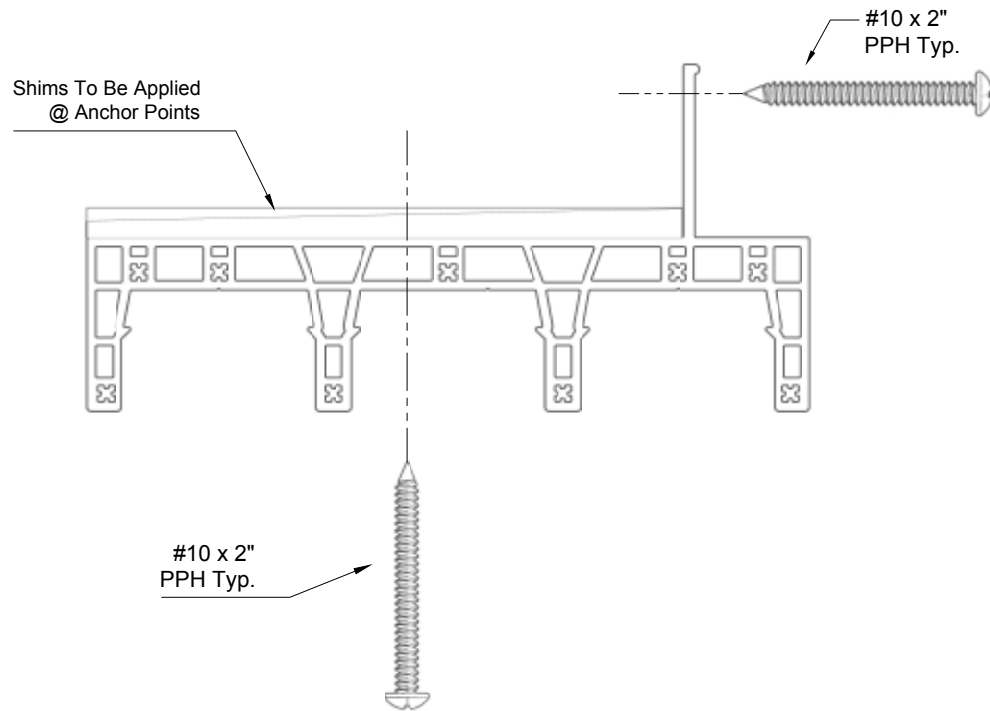

- 5d. Plumb and anchor head using #10 x 2" PPH screws located 6" from each corner and 12" on center. Shim at all anchor points. See Figs. 5.3 and 5.4.
- 5e. Once anchoring is finished, walk on the track full length to settle sealant.
- 5f. Cross tape frame corner to corner to ensure it is square.
- 5g. Apply self adhesive corners to the main frame to cover the gap. Apply sealant around the edges and tool sealant flat.
- 5h. Apply head waterproofing. See Fig. 5.5.

Fig. 5.4
Fasteners at Nail-Fin


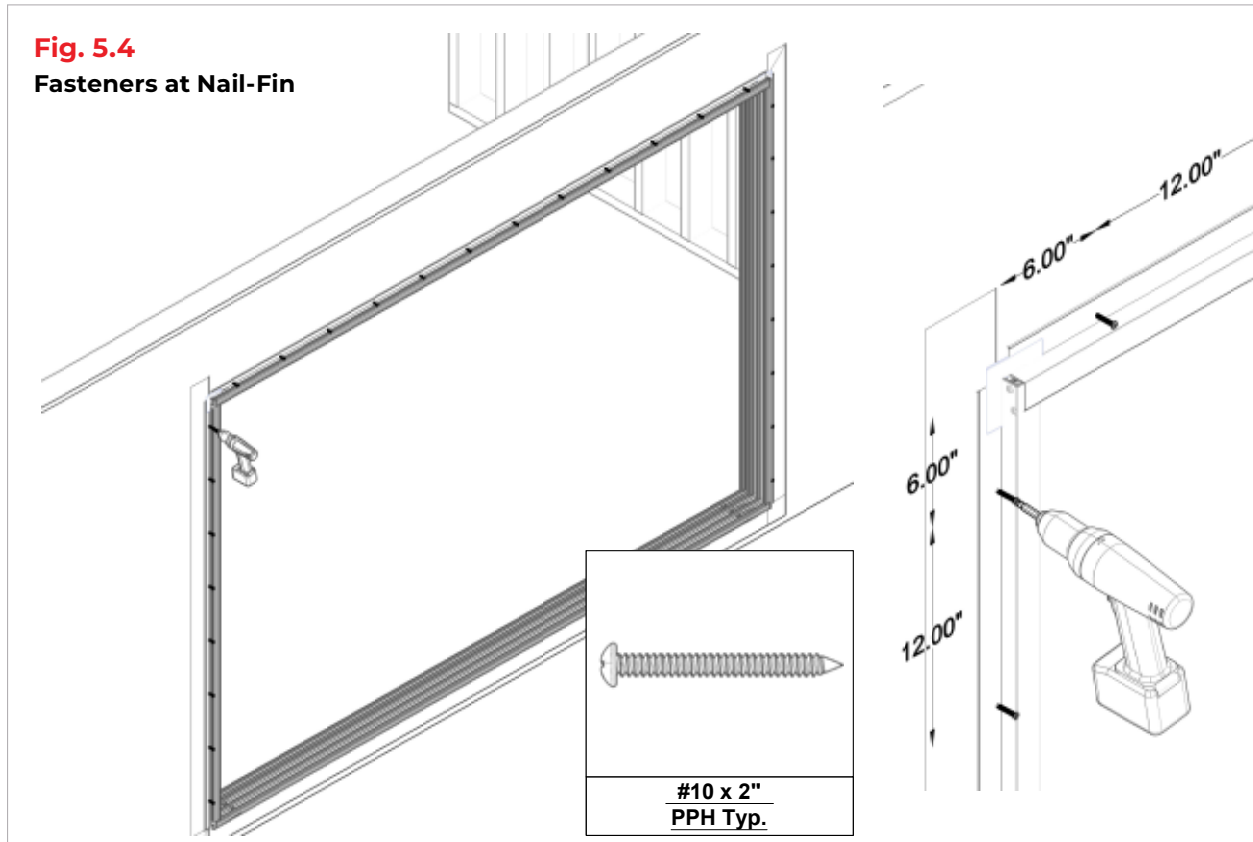


Fig. 5.5
Apply Flashing at Head

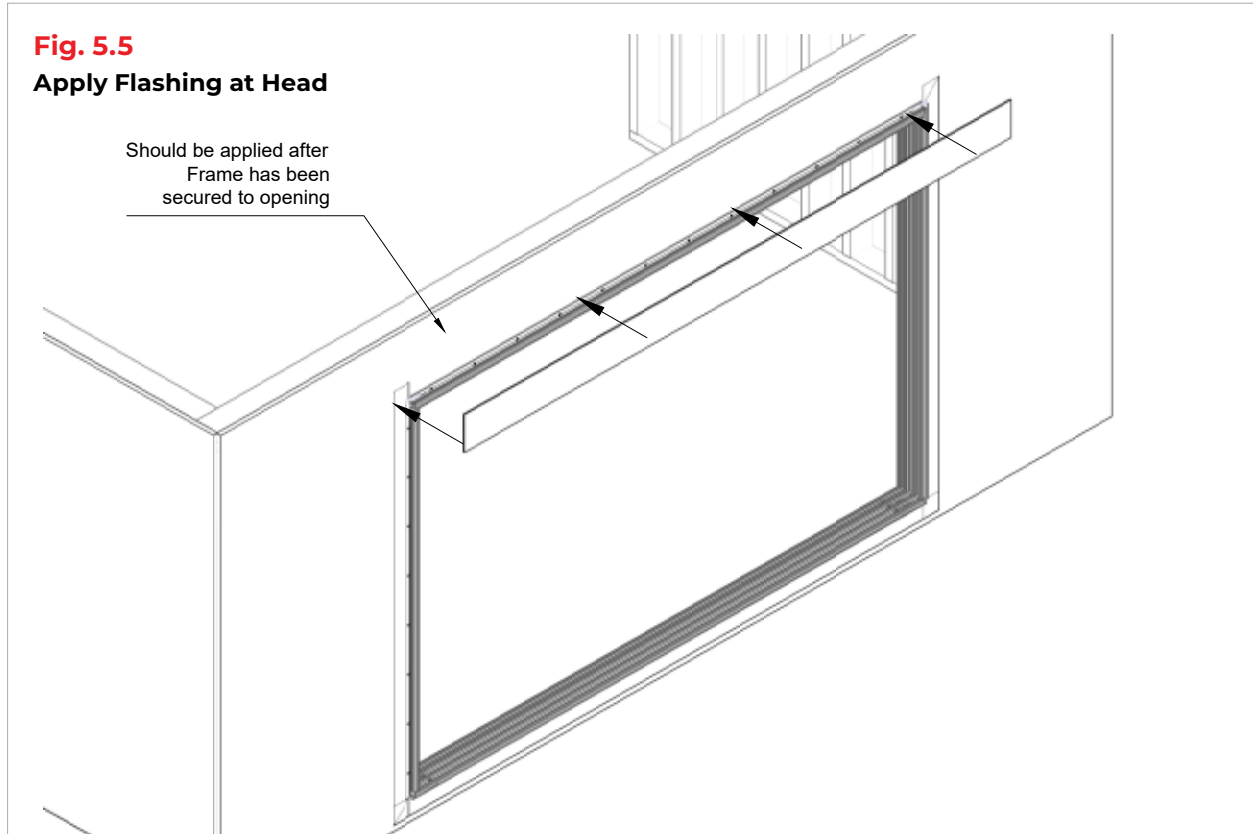

Step 6 - Lead Panel Installation

PANEL INSTRUCTION

Remove the black foam blocks from the head channels. The blocks are approximately 1" x 1" x 2.25", and there will be one in each channel except the locking panel channel. Set them aside temporarily; they will be reinstalled when the panel installation is complete.


Each panel will be marked with a white label which includes the unit number and a panel designation. Lead Panel, Intermediate Panel, and Fixed Panel will be labeled accordingly.

IDENTIFY THE LEAD PANEL


If Lead/Inactive Lead Panel has the patio handle option, follow steps 1-5 below. If panel has a flush handle, skip steps 1-5.

1. Lay lead panels flat, outside facing upward, without scratching contacting surfaces.
2. Drill holes as shown in Fig. 6.1, ensuring they are drilled on the lead stile. Holes are for XO doors; OX doors get mirrored holes.

Fig. 6.1
Drill Panel Bumper Holes

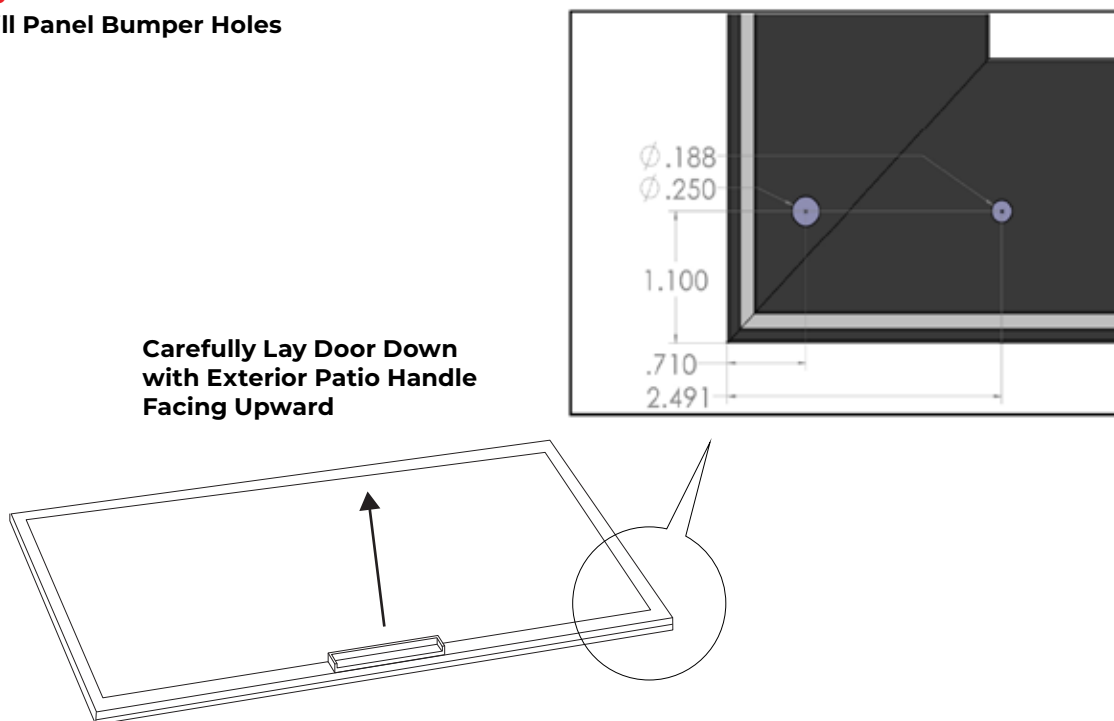


3. Remove rollers to allow for panel bumper installation.
4. Place panel bumper onto door as shown in figure 6.2 (mirror for OX doors). Place backer plate into the stile, aligning it with the exposed hole in the panel bumper, and then fasten the bumper into place using the included machine screw. Apply the rubber stop covering the screw.
5. Reinstall roller to panel. Move onto step "a" on the following page.

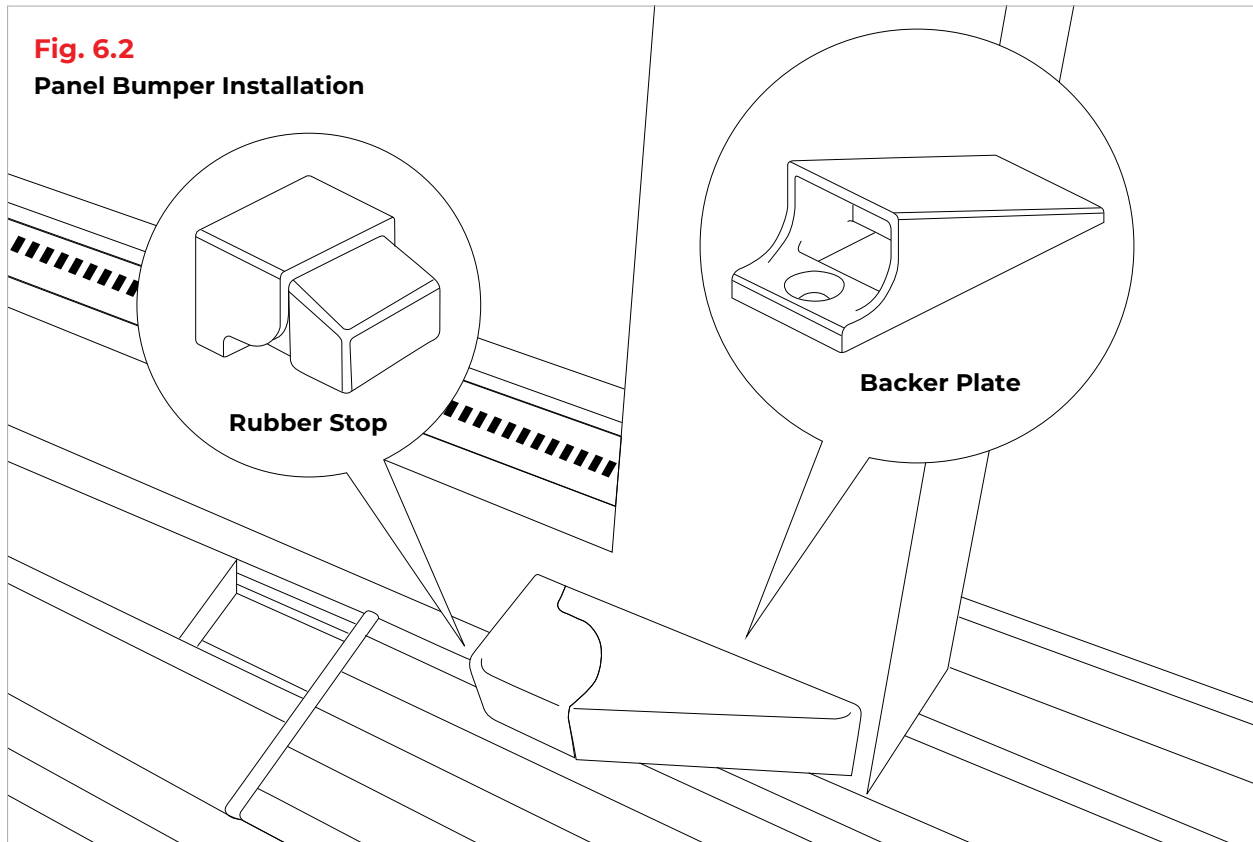

- 6a. From the outside of the building, with the glazing stop to the inside, lean the top of the panel in and insert it into the extreme interior head track and lower it onto the threshold. See Fig. 6.3.

Fig. 6.3
Install Lead Panel

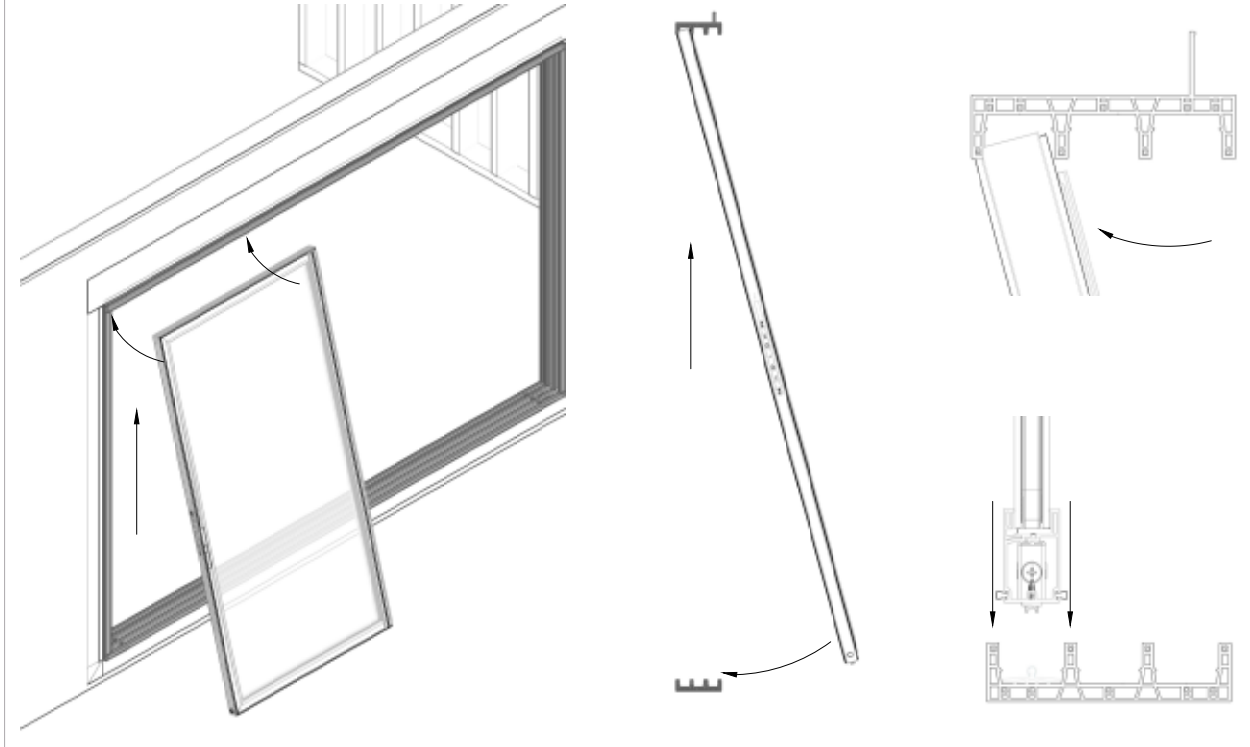

- 6b. Pull off roller adjustment plugs, and lift panel so there is no weight on it and then using a #2 Phillips screwdriver, adjust panels up high enough to gain access to the bottom of the rails. Thoroughly clean rails and then apply supplied adhesive-backed piles ("bunny tails"). Adhere two to each end of the bottom rail. Ensure that the area is clean before adhering the bunny tails. After application, adjust the panels to an initial height of approximately $\frac{1}{2}$ " from the top of the track. See Fig. 6.4 and 6.5.

Fig. 6.4
Adjust Rollers


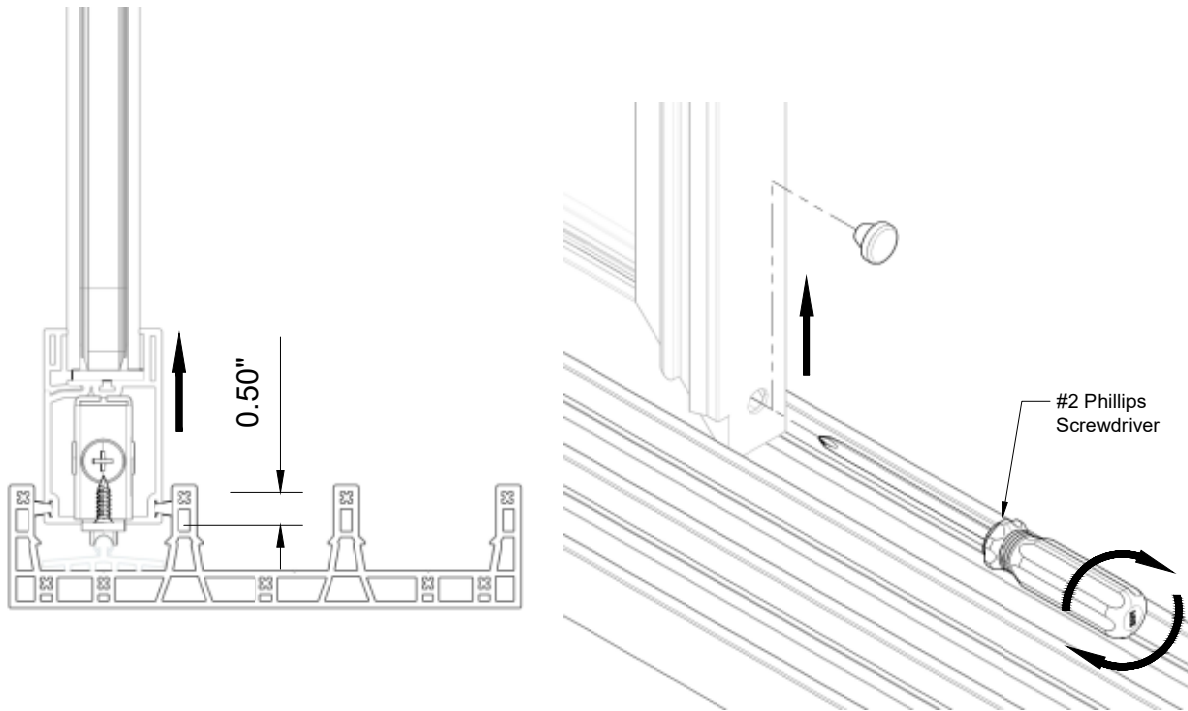


Fig. 6.5



"Bunny Tail" Application - Bottom of Panels

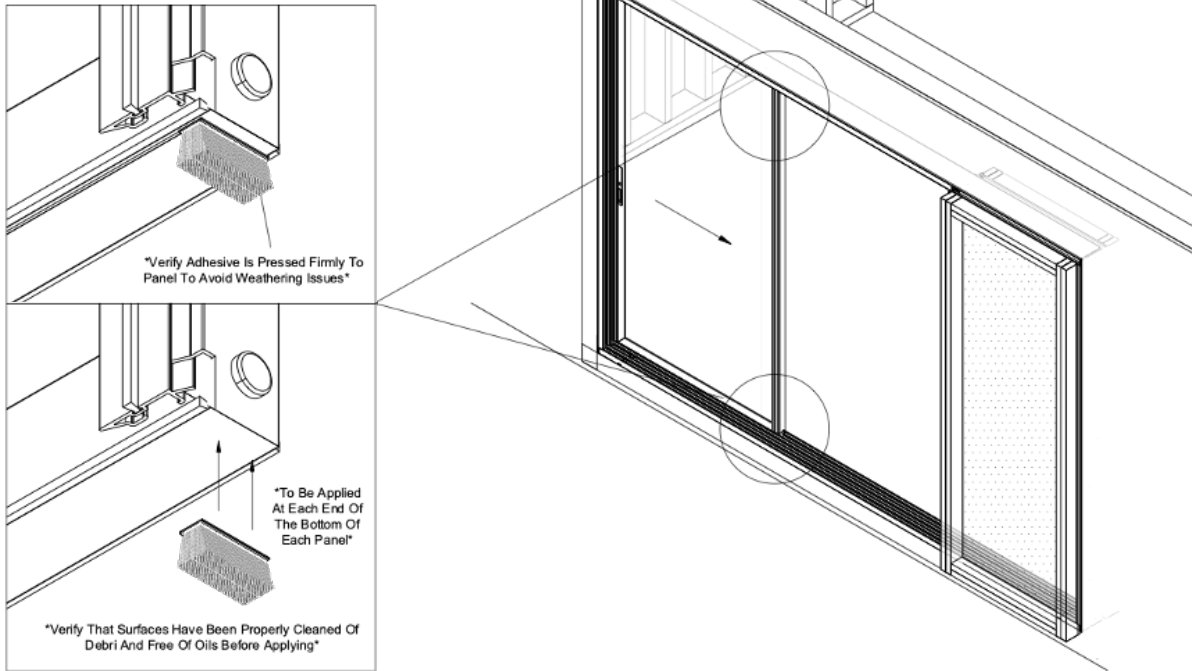

6c. Strike Adjustment and Installation


- 6d. Before installing the strike, fully tighten the strike middle adjustment screw, then fully tighten the two outer adjustment screws. Do not tighten the outside adjustment screws before tightening the middle adjustment screw as this can bend the strike. See Fig. 6.6
- 6e. Measure to the center of the lock from the bottom of the frame then scribe this height onto the frame to get a correct strike location. Use either of the center screw holes to fasten the strike in, aligning the center of the strike with the scribe mark. Close and lock the panel to verify correct locking engagement.
- 6f. Once located correctly, fasten the strike to the frame using all 4 screw holes and test the locking action while ensuring that the panel is engaged in the jamb. If the lock is difficult to engage and disengage, adjust the strike outward until the lock can be operated smoothly.
- 6g. To loosen (adjust) the strike, first loosen the outside adjustment screws, then loosen the middle adjustment screw. Do not over loosen the middle adjustment screw before loosening the outside adjustment screws as this can bend the strike. To re-tighten the strike, follow step 1 above.

Fig. 6.6
Attach Strike to Jamb

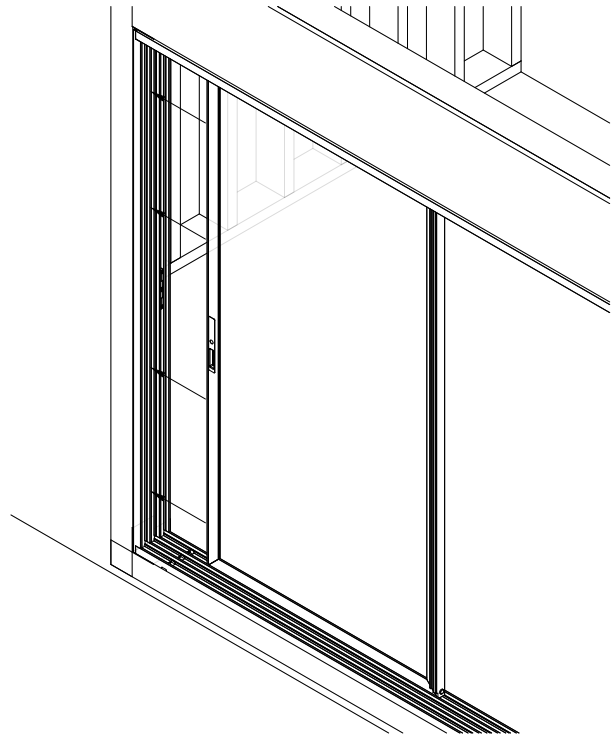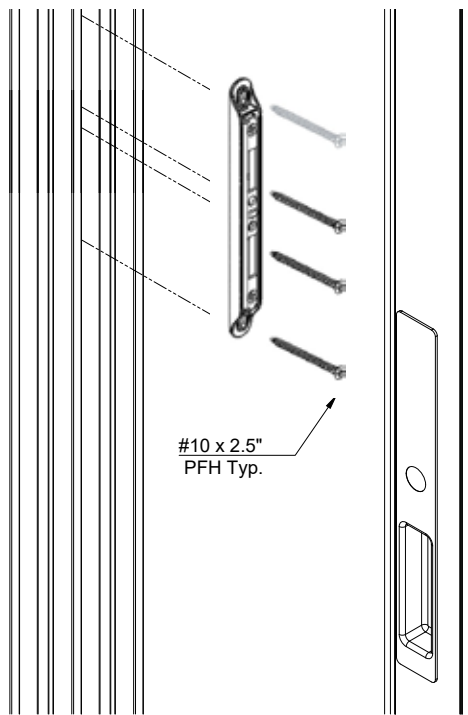

6h. Slide panel full width to confirm smooth operation. See Fig. 6.7.

Fig. 6.7
Slide Panel Full
Width to Confirm
Smooth Operation

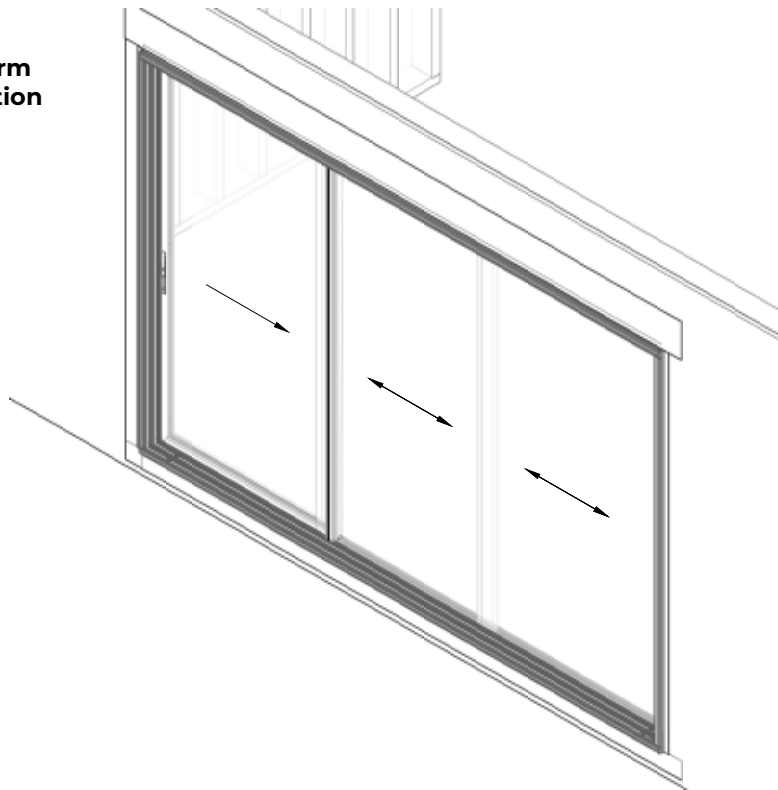


Step 7 - Intermediate Panel Installation


- 7a. Locate the intermediate panel that is to be installed directly adjacent to the lead panel.
- 7b. From the outside of the building, with the glazing stop to the inside and interlocker overlapping the lead panel, lean the top of the panel in and insert it into the center head track and lower it onto the threshold. See Fig. 7.1.

Fig. 7.1


Install Intermediate Panel (3-Panel System)

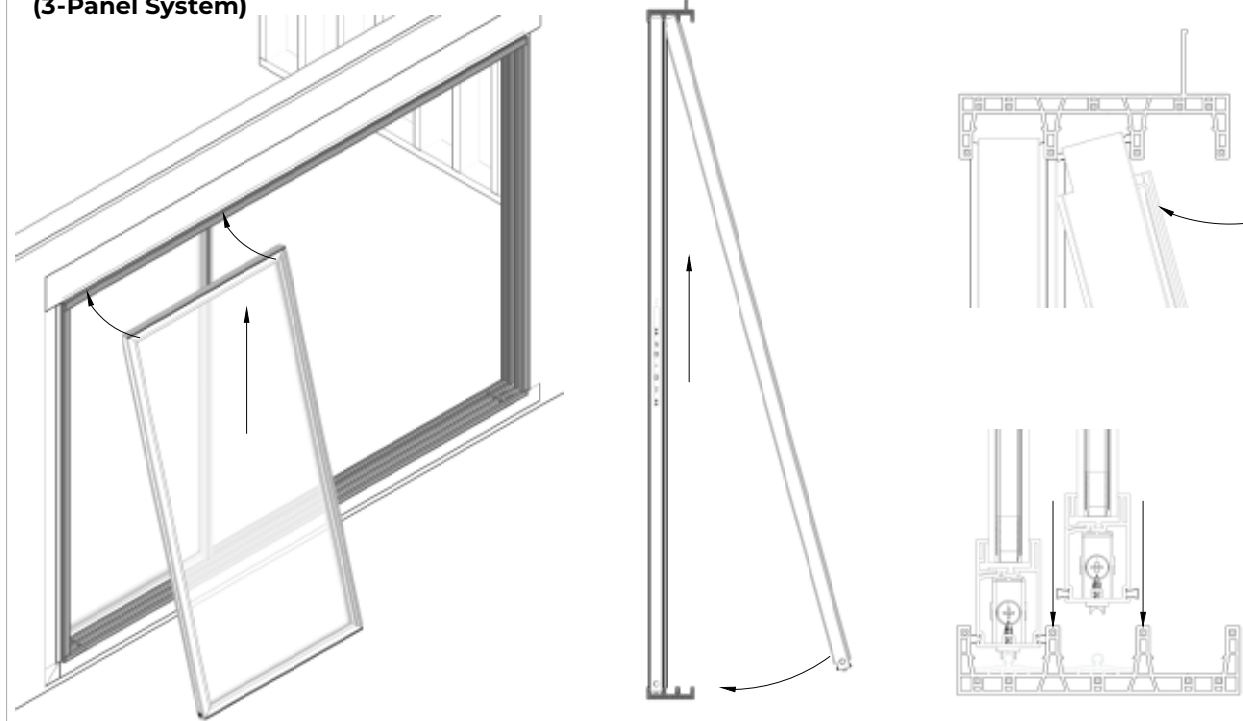

- 7c. Using a #2 Phillips screwdriver, insert through the hole at the bottom of each stile and adjust the rollers up $\frac{1}{2}$ ". Roll the panel towards the lead panel to view the vertical gap between the interlockers. Make final roller adjustments so the gap is consistent from top to bottom of the panel. See Fig. 7.2.

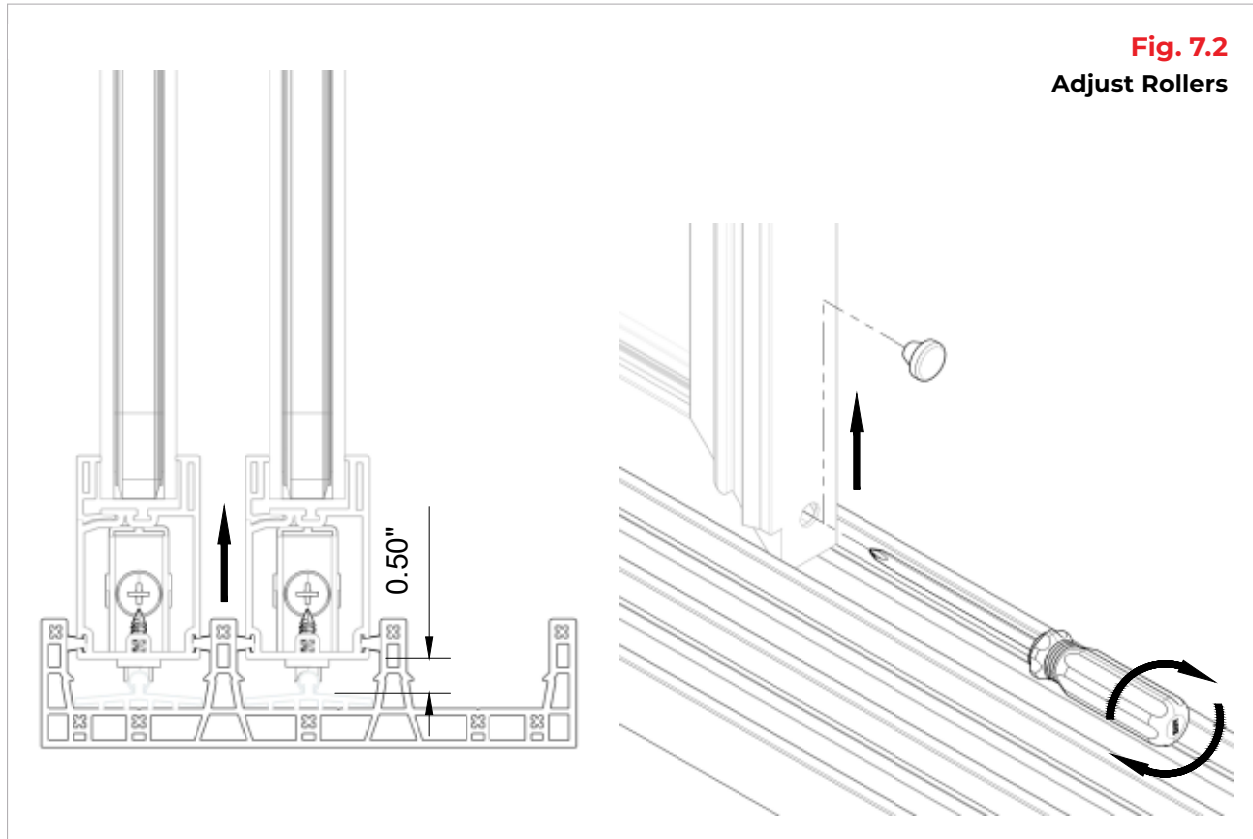


7d. Slide panel full width to confirm smooth operation. See Fig. 7.3.

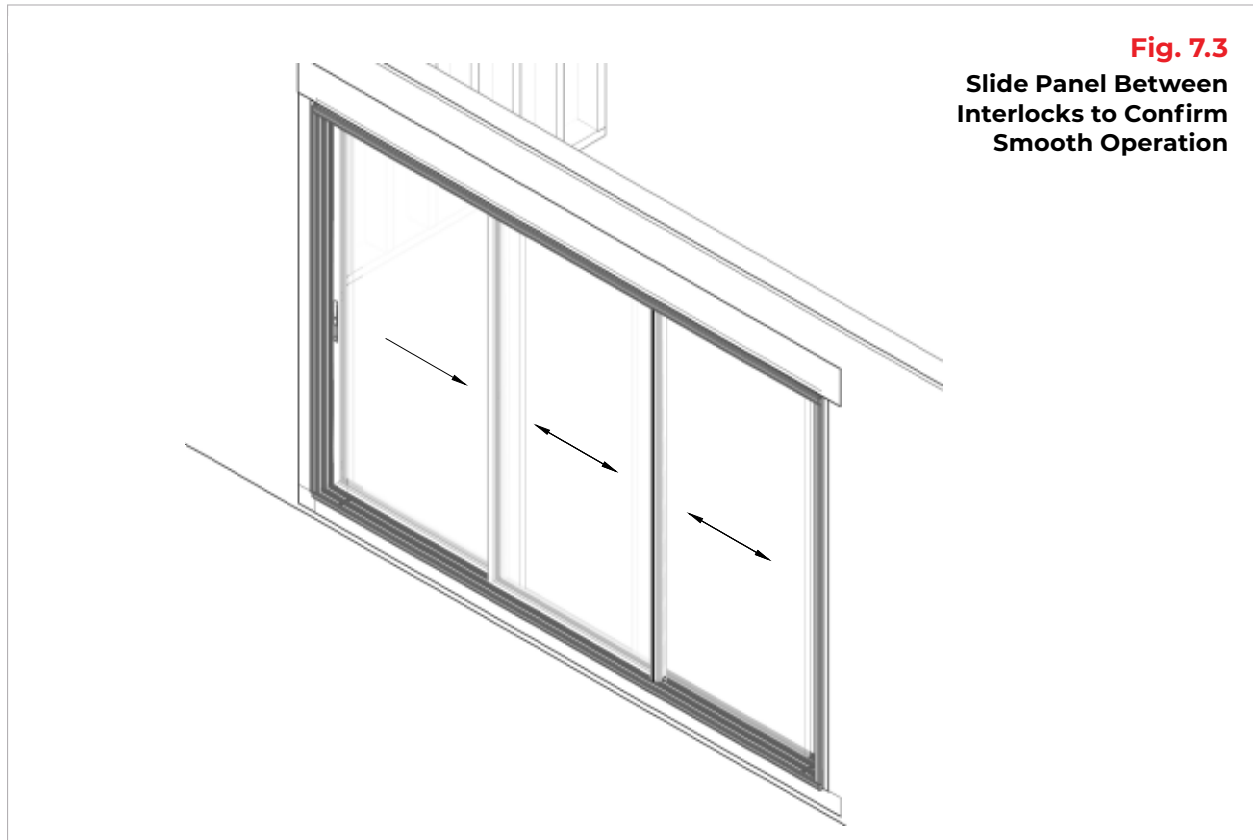

Step 8 - Fixed Panel Installation

- 8a. Locate the fixed panel.
- 8b. From the outside of the building, with the glazing stop to the inside and interlocker overlapping the intermediate panel, lean the top of the panel in and insert it into the exterior head track and lower it onto the threshold. See Fig. 8.1.

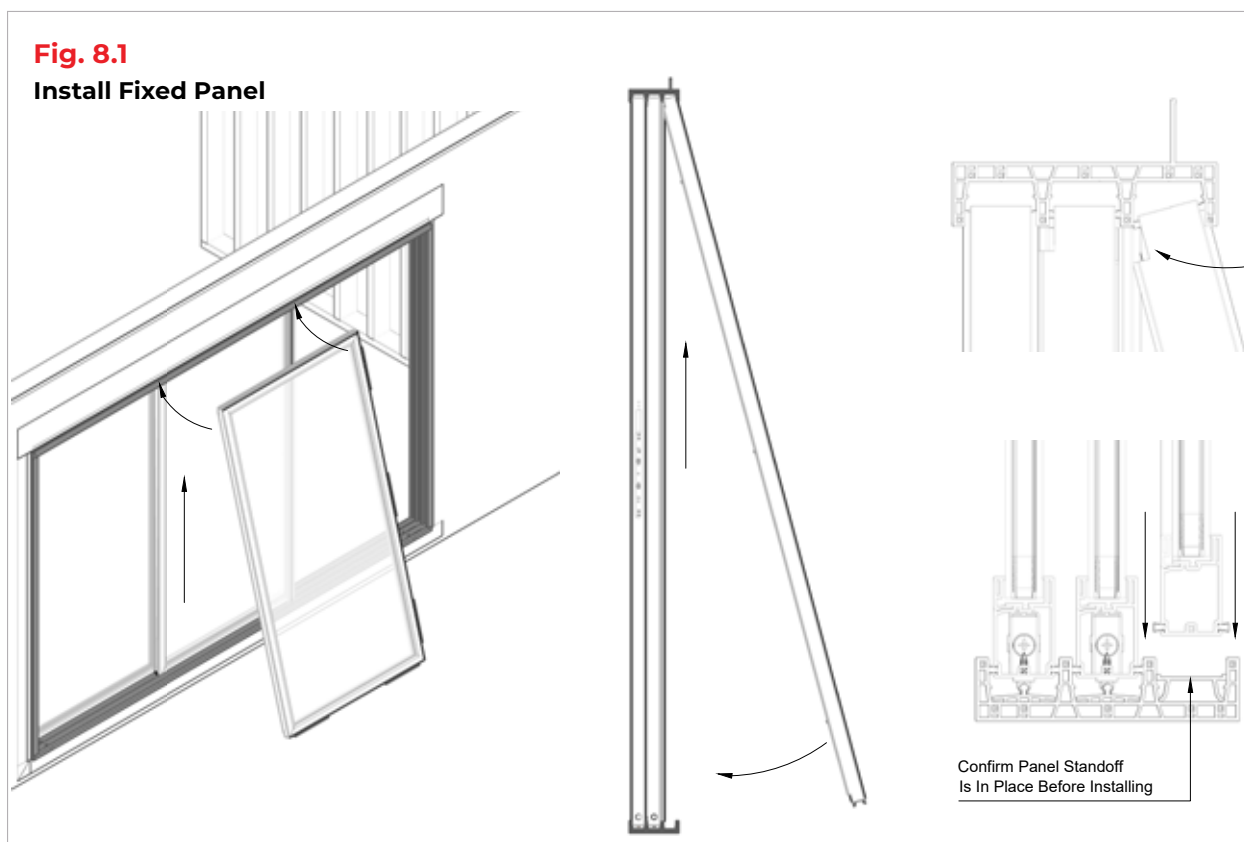

8c. Close and lock the door.


NOTE: THIS IS A VERY IMPORTANT STEP.

8d. Using the ball of your foot, push fixed panel all the way into the fixed jamb.

8e. Pre-drill and anchor fixed panel. See Fig. 8.2.


Fig. 8.2

Pre drill and Anchor Fixed Panel from the Interior Side of the Door at All 3 Locations

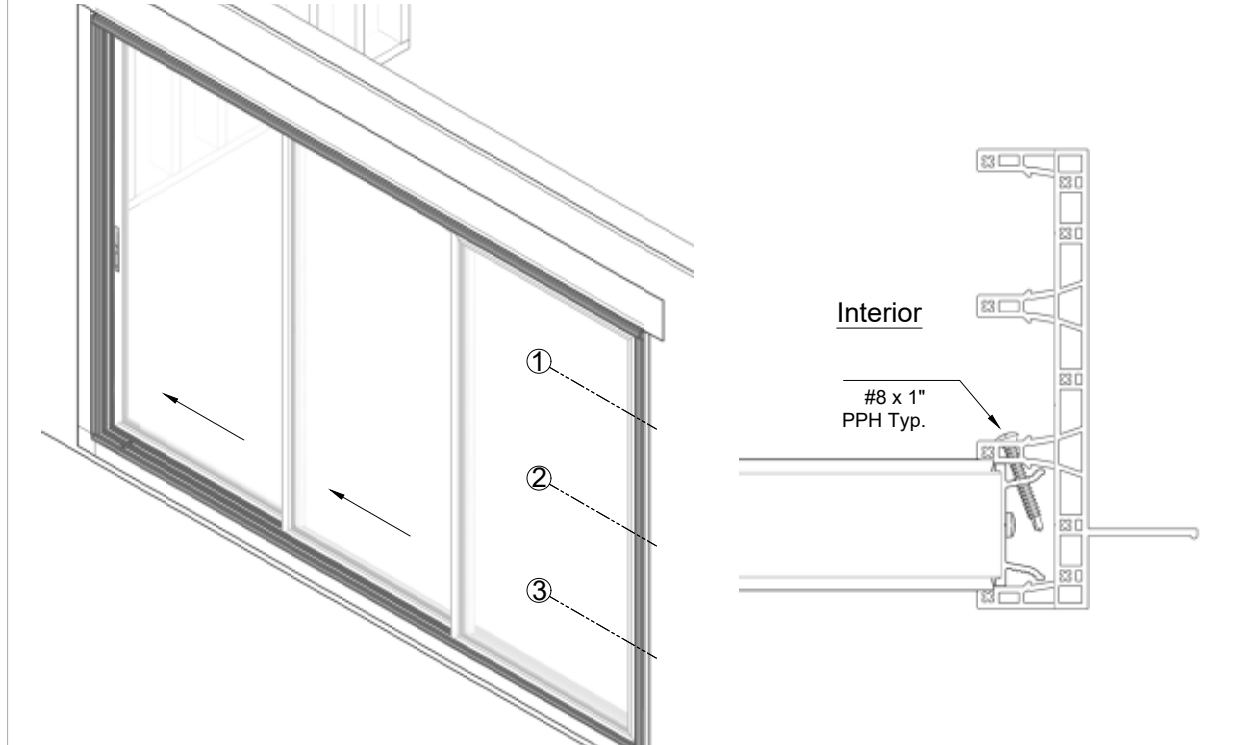


- 8f. Install foam blocks at intermediate and fixed panels. Use a dot of silicone to hold in place.
See Fig. 8.3.

Fig. 8.3
Install Foam Blocks

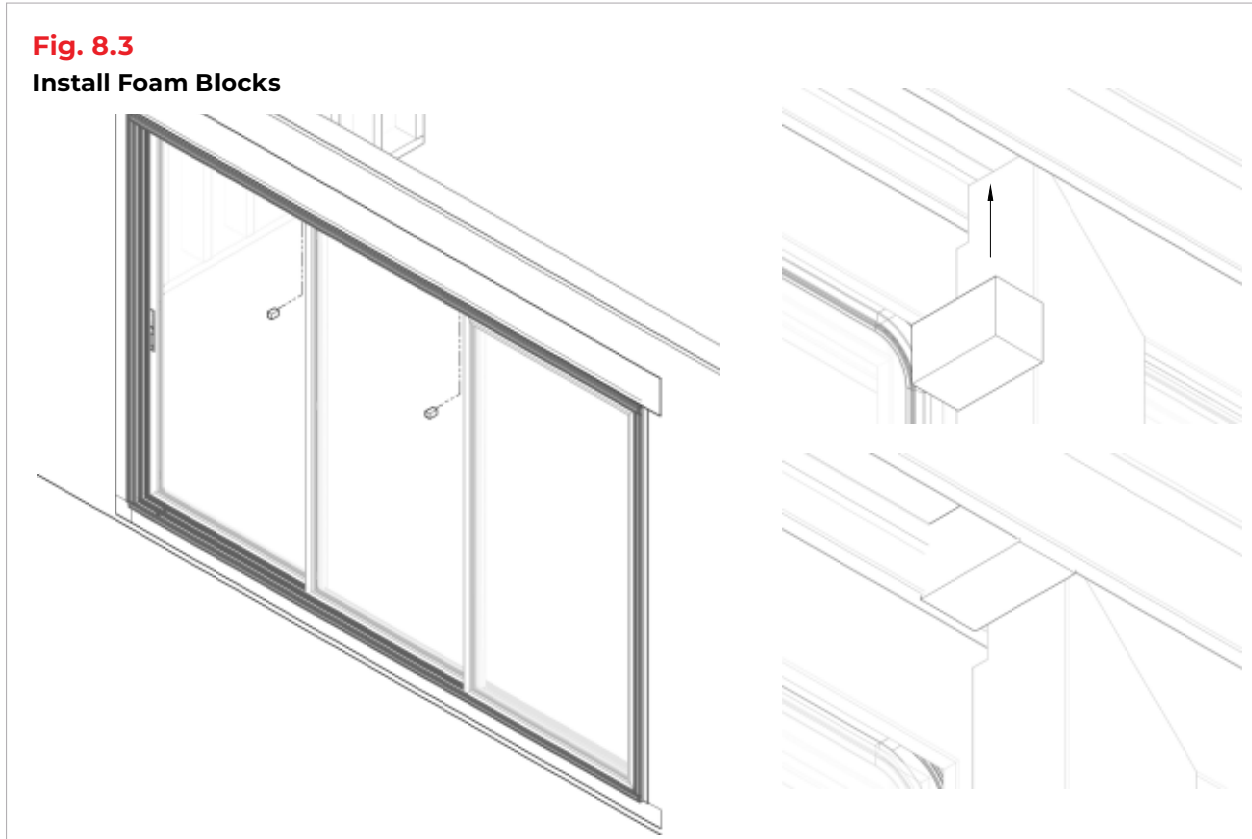


Step 9 - Sill and Jamb Cover Installation

9a. Using a rubber mallet and plastic block, tap jamb covers into place. See Fig. 9.1.

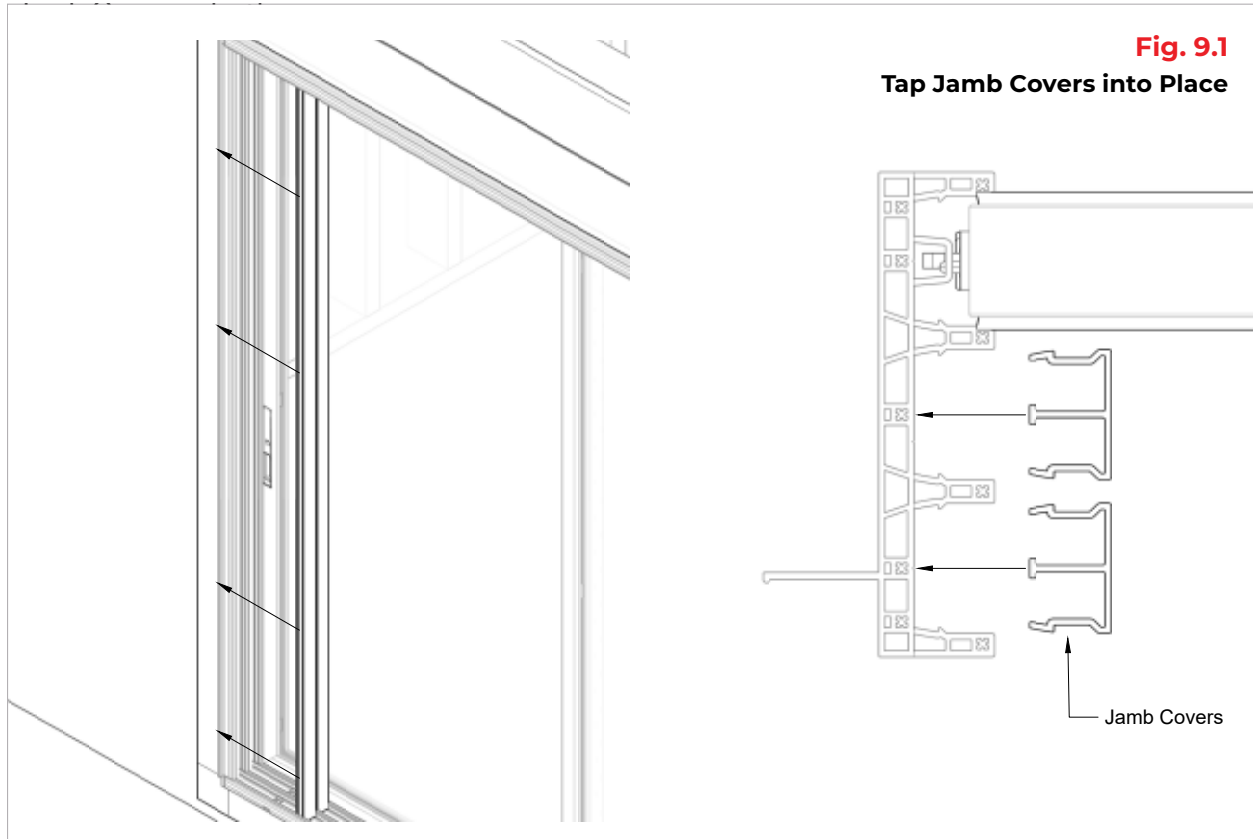

9b. Using a rubber mallet, tap sill covers into place. See Fig. 9.2.

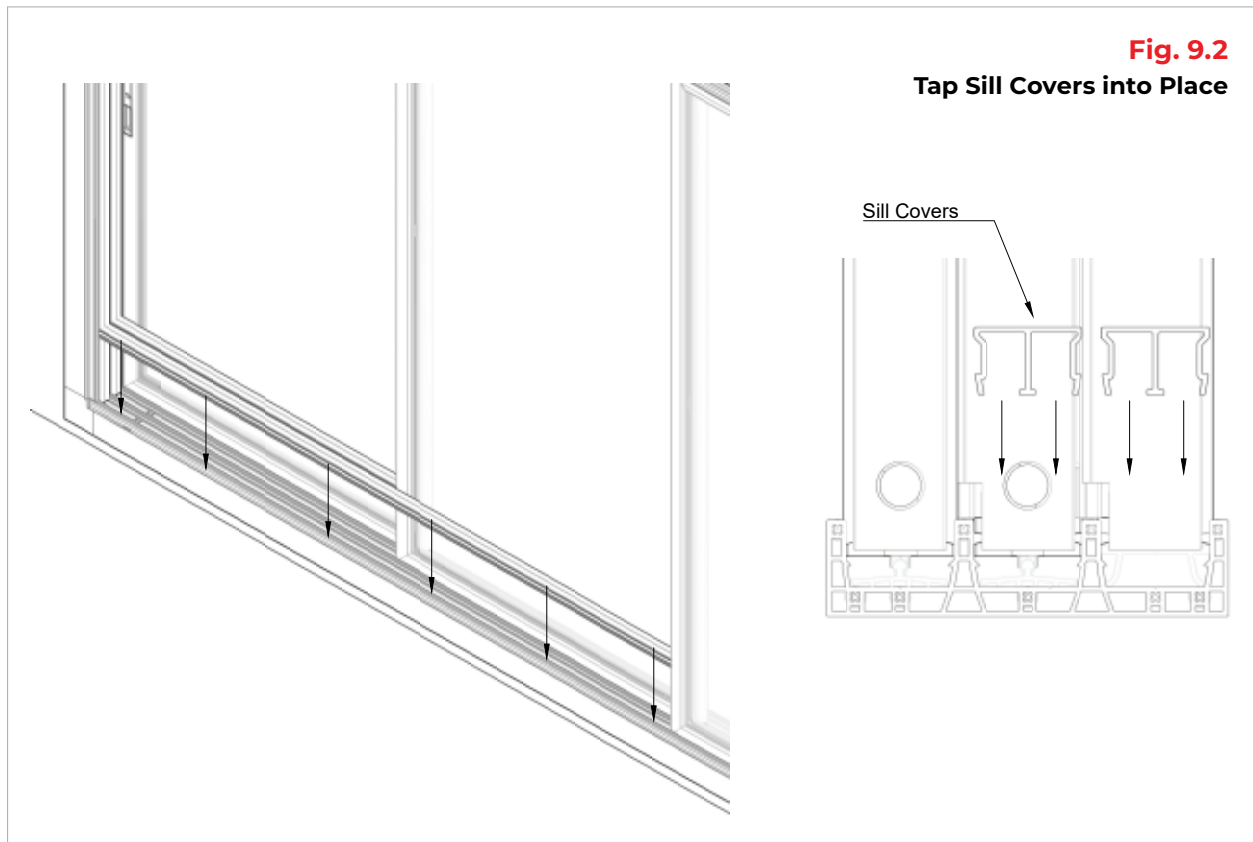

9c. Confirm operation of the door and lock.

NOTE: THIS IS A VERY IMPORTANT STEP.

The door installation is complete!

VX350 STACKING MOVING GLASS WALLS

MILGARD[®]
WINDOWS and DOORS

Success means getting it right
in every detail, every time.
Build boldly with MILGARD.

milgard.com

By MITER Brands[™]

A family of leading window and door
brands, united by our passion for
quality and relentless pursuit of 100%.

miterbrands.com