



Clearly the best.®

Arch Frame Windows

Interior Trim





Table Of Contents

Required Tools..... 3

Required Parts..... 3

Install Interior Trim..... 4

Clean Up 6




Revisions..... 7

Required Tools

Installer Supplied

Required Tools

- Level
- Tape Measure
- Pencil

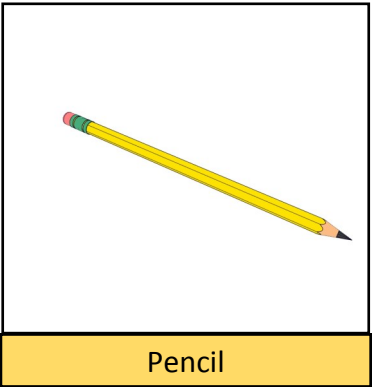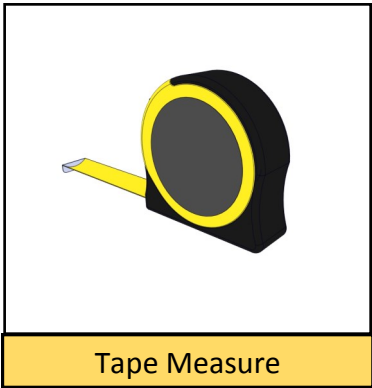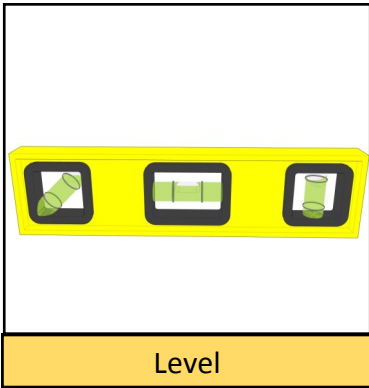

Required Parts

Installer Supplied

Required Parts

- Masking Tape



Install Interior Trim

Note:


- ♦ Interior radius trim is available from Milgard. Linear trim provided by installer.
- ♦ Installer may brad nail into Arch Frame windows to attach trim.

Header Alignment

- Align trim segments with other segments on window for proper reveal and best aesthetics
- The inner edge of the header trim is designed to be 5/8" from the edge of the window
- If there are jamb extensions present, there is a 1/4" reveal from the inner edge of the jamb extension to the header inner edge
- Temporarily tape header into position

Jamb Alignment


- To determine proper miter angle, place jamb trim over header trim
- Make sure jamb trim has desired reveal
- Temporarily tape jamb trim into position
- Repeat for other side

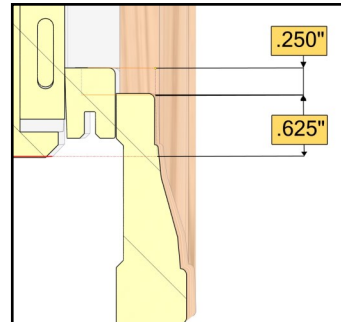


Trim Align. Fascia & Jamb




Frame To Header Trim

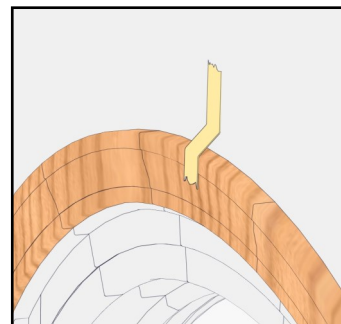


Tape On Trim Header

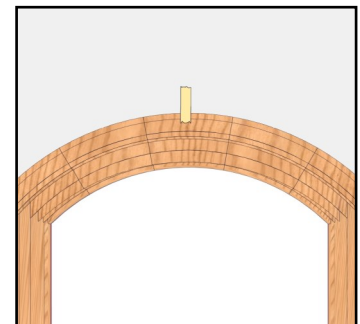


Fascia & Trim Segments

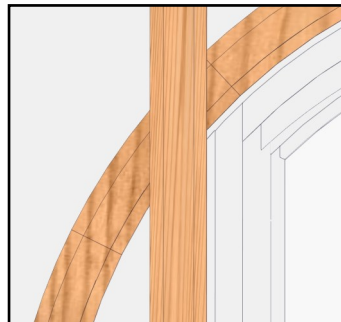

Overlap Trim

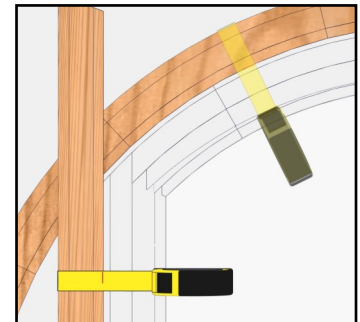

Trim Segments Equal

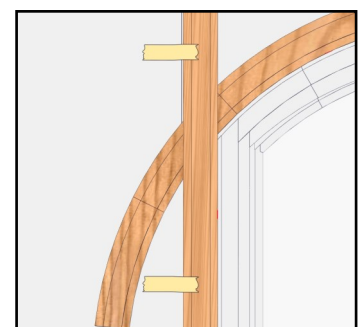


Tape Trim Into Place


Install Interior Trim (Continued)

Miter Angle


- Mark intersection points where jamb crosses header trim
- Draw line between intersection points
- Cut mitre on jamb
- Position mitred jamb back onto header
- Scribe along mitered cut onto header
- Repeat for other jamb
- Remove header and cut along scribed lines
- Attach Trim to window and wall with 1 to 1-1/2" long brad nails
- Putty brad holes and prep for staining/painting

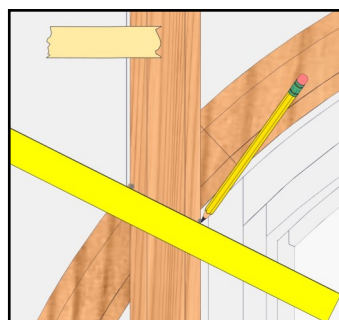


Mark Intersections

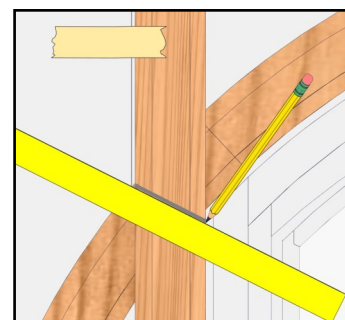

Connect Points

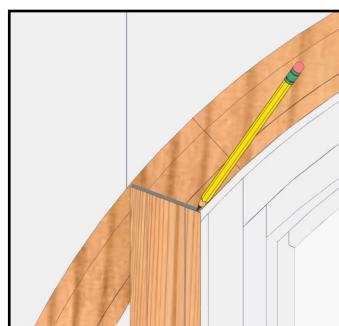

Mark Header

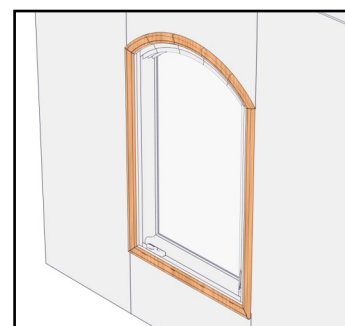

Installed Trim

Clean Up

- After siding installation is complete, install exterior sealant between siding and window or trim
- Wipe up any excess caulk
- Clean up scuff marks with soap and water
- TiteBond® WeatherMaster Sealant compatible colors

TiteBond® WeatherMaster Sealant Compatible Colors		
Milgard Palette Color	TiteBond® WeatherMaster™ Color Reference	Milgard Part Number
Bark	44061	SE7673AR
Black Bean	44031	SE7673BL
Bronze	45841	SE7673ZB
Cinnamon	45521	SE7673CI
Classic Brown	44211	SE7673LW
Espresso	45661	SE7673EX
Evening Sky	45531	SE7673ES
Fern	45651	SE7673FN
Fog	46681	SE7673FO
Frost	44001	SE7673FS
Harmony	44641	SE7673HR
Ivory	45511	SE7673IV
Pea Pod	49211	SE7673PP
Sand	46041	SE7673SD
Tweed	44691	SE7673TE
Twilight	44031	SE7673BL



Clearly the best.

Revisions

REVISIONS					
REV	ECN	DESCRIPTION	DATE	DRAWN	APPD.
A	4278ECNEG	INITIAL RELEASE	10/13/2016	BBB	PK